

MHIII A

Dispensing System

USER MANUAL



Table Of Contents

Introduction

About This Manual.....	1
------------------------	---

Parts & Illustrations

Standard & Optional Equipment	2
System Specifications	3
22850-01A MH III A System Console	4
22850-01A MH III A System Assembly	6
22852-01A MH III A Control Box Assembly	15
22852-01A MH III A Schematic	20
21835-00 Fluid Section Assembly	23
22075-00 Heat Exchanger Assembly	25
22023-01 Manual High Pressure Hose Assembly	29
Typical System Layout	30
Typical System Hose Connections For 50 Ft.	31
Typical System Connections For 100-300 Ft.	32

Safety

Urethane Safe Handling and Use of Foam Equipment	33
--	----

Installation

Instructions	37
Optional Transfer Pump Installation / Air Dryer Kit	39
Electrical Connections	40
Hydraulic Pack	40

Operation

Initial Start-up Procedures	41
Over Pressure System Protection	44
Over Pressure Problem Correction	45
System Shut Down	46
System Daily Start-Up	47

Limited Warranty Policy	49
-------------------------------	----

Notes	50
-------------	----

Technical Assistance	52
----------------------------	----

For Your Reference	INSIDE BACK COVER
--------------------------	-------------------

Introduction

About This Manual

Before operating, maintaining or servicing any **GlasCraft** system, read and understand all of the technical and safety literature provided with **GlasCraft** products. If you do not have the proper or related manuals and safety literature for your **GlasCraft** system, contact your GlasCraft distributor or **GlasCraft, Inc.**

In this **GlasCraft** technical and safety publication, the following advisories will be provided where appropriate:

NOTE

Is information about the procedure in progress.

CAUTION

Is imperative information about equipment protection.

WARNING

Is imperative information about personal safety.

The information in this document is intended only to indicate the components and their normal working relationship typical use. Each assembly should be directed by a **GlasCraft** distributor or made from the **GlasCraft** assembly instructions provided.

This manual provides information for the assembly, operation, maintenance and service of this **GlasCraft** product as used in a typical configuration. While it lists standard specifications and procedures, some deviations may be found.

In order to provide our users with the most up-to-date technology possible, we are constantly seeking to improve products. If technological change occurs after a product is on the market, we will implement that technology in future production and, if practical, make it available to current users as a retrofit, up-date or supplement. If you find some discrepancy between your unit and the available documentation, contact your **GlasCraft** distributor to resolve the difference. **GlasCraft, Inc.** reserves the right to change or modify this product as it deems necessary.

Careful study and continued use of this manual will provide a better understanding of the equipment and process, resulting in more efficient operation, longer trouble-free service and faster, easier troubleshooting.

Standard & Optional Equipment

Model - MH III A


Standard Equipment	
Part Number	Description
22850-01A	MH III A Dispensing System
23950-XX	Probler P2 Gun Assembly • W/ Round Spray Mixing Chamber
18006-01	Whip Hose Assembly
22023-01	Manual High Pressure Heated Hose Assembly
17661-XX	Gun Service Kit
59934-04	Dioctyl Phthalate, 1 Qt.
GC-1267	System User Manual

Options	
Part Number	Description
22023-01	High Pressure Hose Assy., 50 Ft.
22094-00	Required To Complete Hose Electrical Circuit when used with 18006-00 whip hose.


Recommended Service Kits	
Part Number	Description
17661-XX	Gun Service Kit
21063-00	Heat Exchanger Kit
21845-00	Pump Fluid Section Repair Kit

System Specifications

Material Ratio:	1:1 (Fixed)
Material Viscosity:	200- 2000 Centipoise (Cps) At Operating Temperatures
Output:	.042 GPC .159 LPC
Operating Temperatures:	32° F (0° C) - 190° (88 ° C)
Operating Psi:	3000 Psi. Max (Over Psi Switches Set)
Hoses:	2200 PSI. W/ 19524-01 2600 PSI. W/ 22024-01
Hydraulic Psi To Pumps:	2:1 Ratio 1000 PSI. Hydraulic PSI. 2000 PSI. Fluid PSI. Per Side.
Purging:	Automatic Pneumatic, Solvent-free, Constant
Electrical Requirements:	74 Amps @ 208/240 Vac, 50/60 Hz Single Phase 5 HP
Compressed Air Requirements:	15 Cfm @ 100 Psi 425 Liters @ 6.8 Bar
Max Hose Length:	310' X 3/8 I.d. Hose Includes 10' X 1/4 I.d. Heated Whip Hose
Shipping Weight:	950 Lbs
Overall Dimensions:	

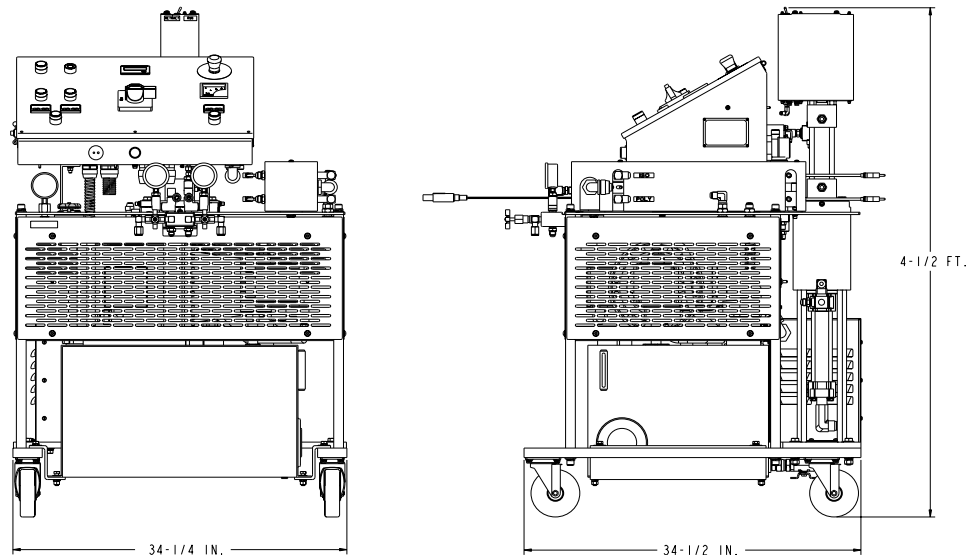


22850-01A MH III A System Console

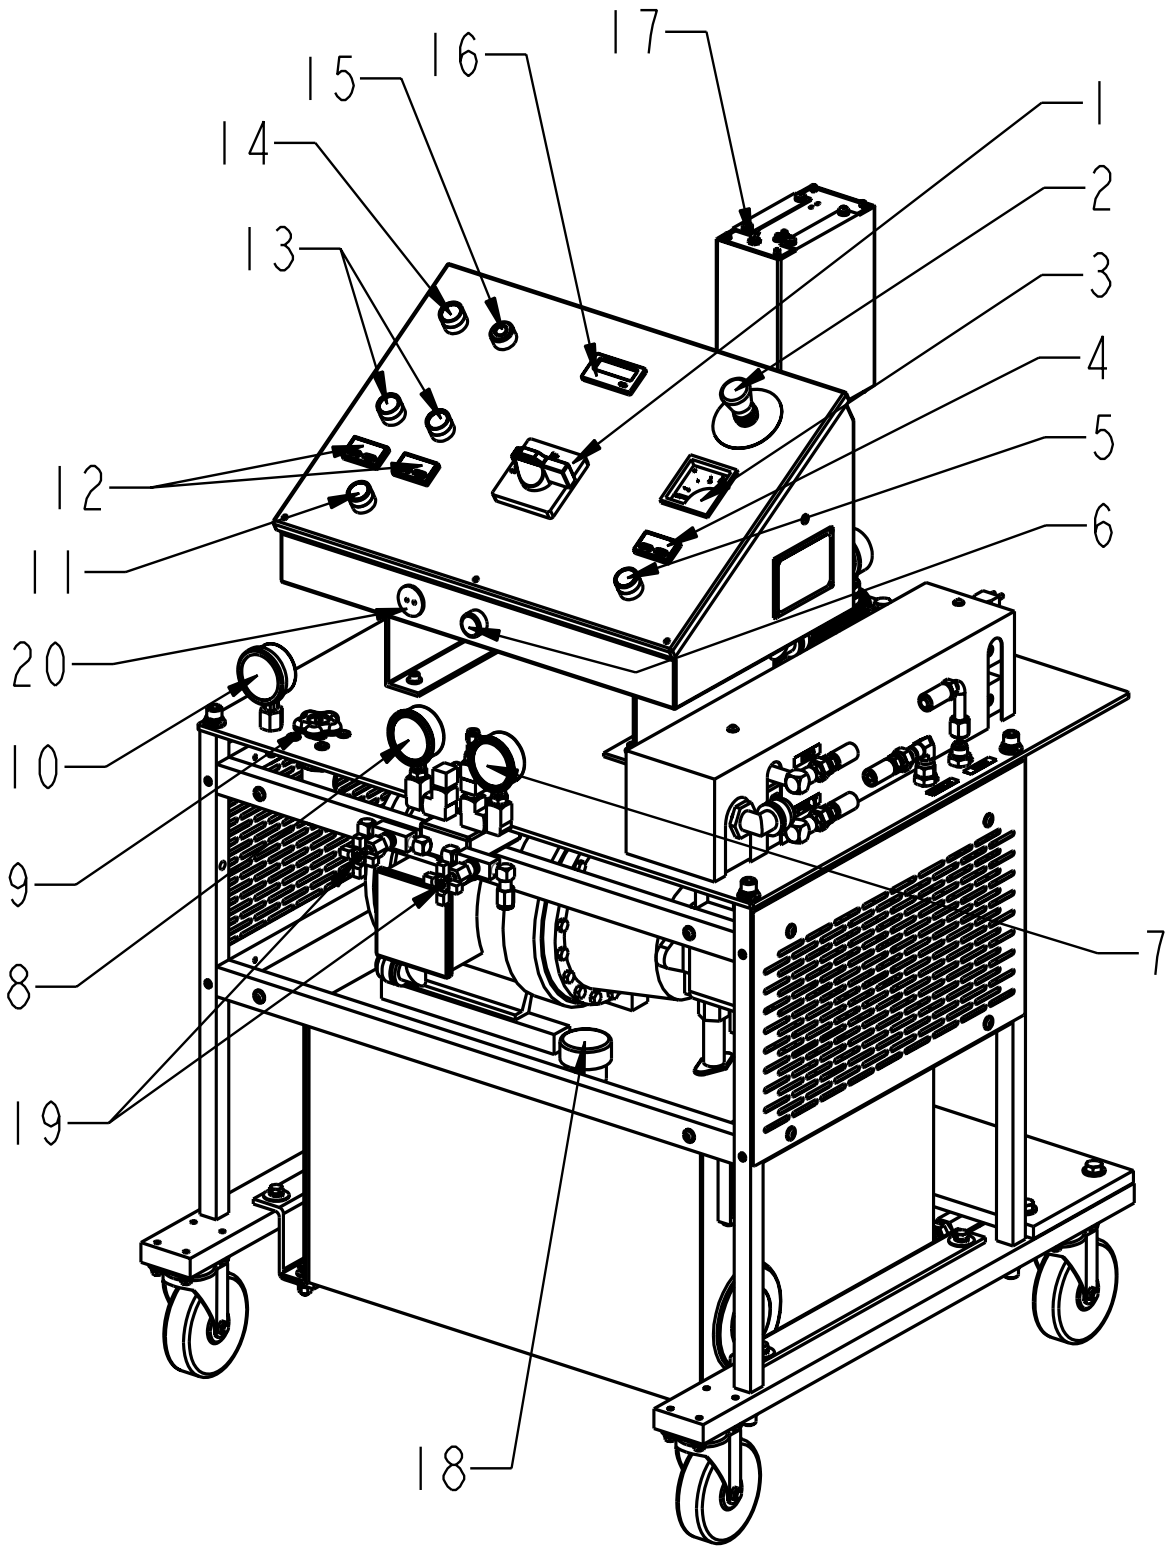


22850-01A MH III A System Console

1	MAIN POWER SWITCH	Controls power and door; handle must point 1 to energize power , handle must point to 0 to open control box door. White pilot indicates when lighted, that the main power is on.
2	EMERGENCY STOP PUSH BUTTON	To stop all functions, push down on red button. To reset, turn handle on push button. All functions will remain off until main power switch has been switched off and back on
3	AMMETER	An instrument for measuring amperes to the primary side of the hose's transformer.
4	HOSE TEMPERATURE CONTROLLER	Controls temperature of liquid inside the heated hoses. To set desired temperature, press the up or down button until you reach desired temperature From this point, the temperature control is completely automatic.
5	ON PUSH BUTTON	Powers the controller. It requires 10 seconds for the Controller to respond.
6	WHITE PILOT LIGHT	Indicates power on.
7	POLY PRESSURE GAUGE	Indicates material pressure.
8	ISO PRESSURE GAUGE	Indicates material pressure.
9	HYDRAULIC PRESSURE KNOB	Increases or decreases hydraulic pressure. Turn clockwise to increase pressure. Turn counter-clockwise to decrease pressure.
10	HYDRAULIC PRESSURE GAUGE	Indicates hydraulic pump pressure
11	ON PUSH BUTTON	Powers the controller. It requires 10 seconds for the Controller to respond.
12	ISO / POLY TEMPERATURE CONTROLLER	Controls temperature of liquid inside ISO heater. To set desired temperature, press the up or down button until you reach desired temperature. From this point, the temperature control is completely automatic.
13	OVER-PRESSURE RESET BUTTONS	When over-pressure is detected, the hydraulic power pack will be shut down, and will remain off until pressure is reduced and the push button is reset.
14	ON PUSH BUTTON	Power On To the hydraulic power pack.
15	OFF PUSH BUTTON	Power Off to the hydraulic power pack.
16	COUNTER	Counts pumps cycles. .042 GPC / .159 LPC
17	RETRACT SWITCH	Retracts pumps to the full down stroke position to protect pump shafts.
18	HYDRAULIC OIL FILL CAP	Remove cap to fill tank with <i>recommended</i> hydraulic oil.
19	ISO / POLY DUMP VALVES	Relieves pressure and material from ISO & POLY side.
20	HOSE THERMOCOUPLE OUTLET	Power outlet for hose thermocouple.


22850-01A MH III A System Assembly

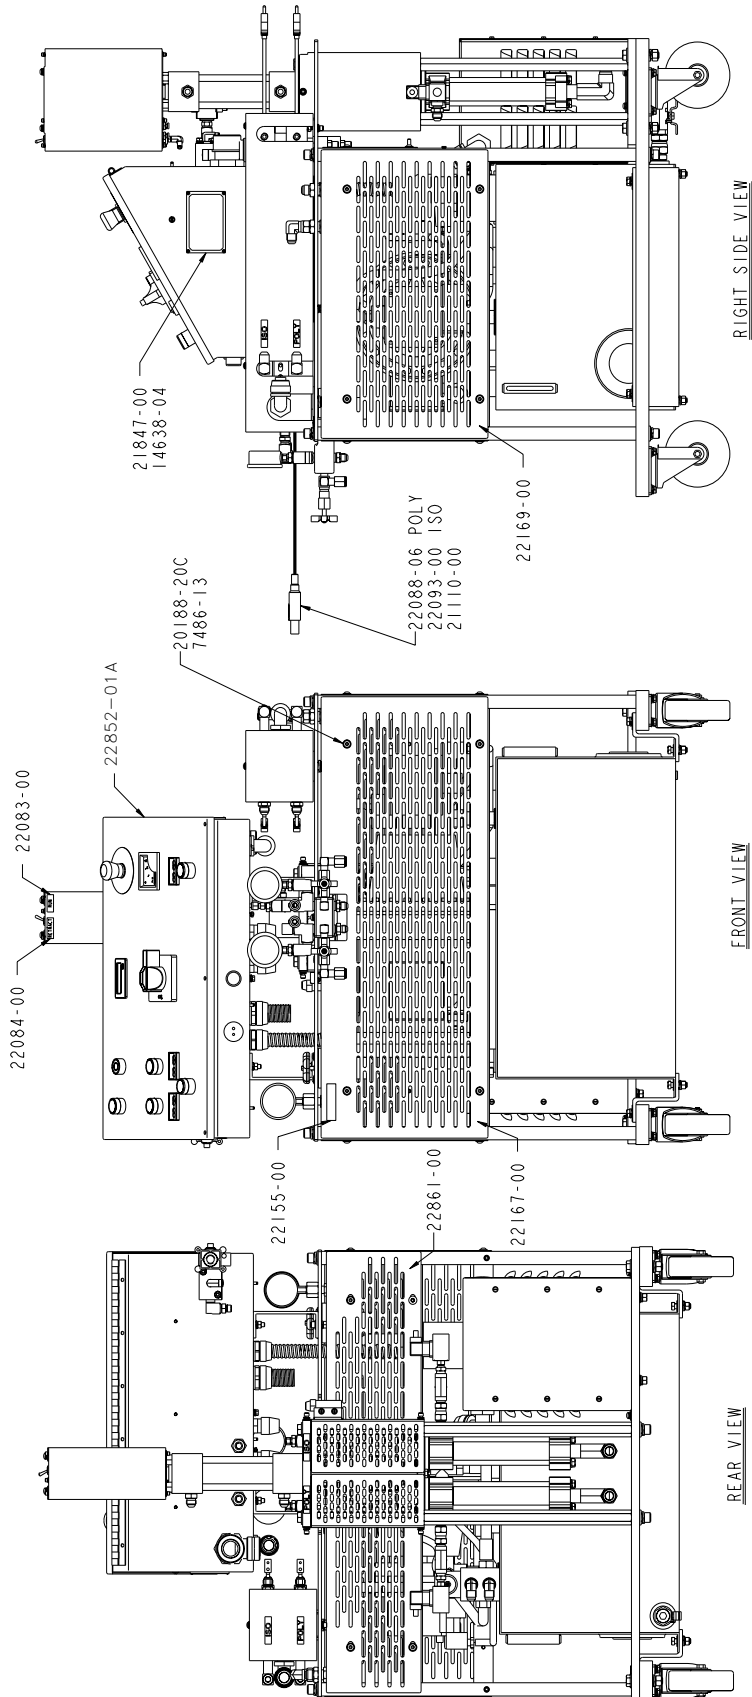

22850-01A MH III A System Assembly

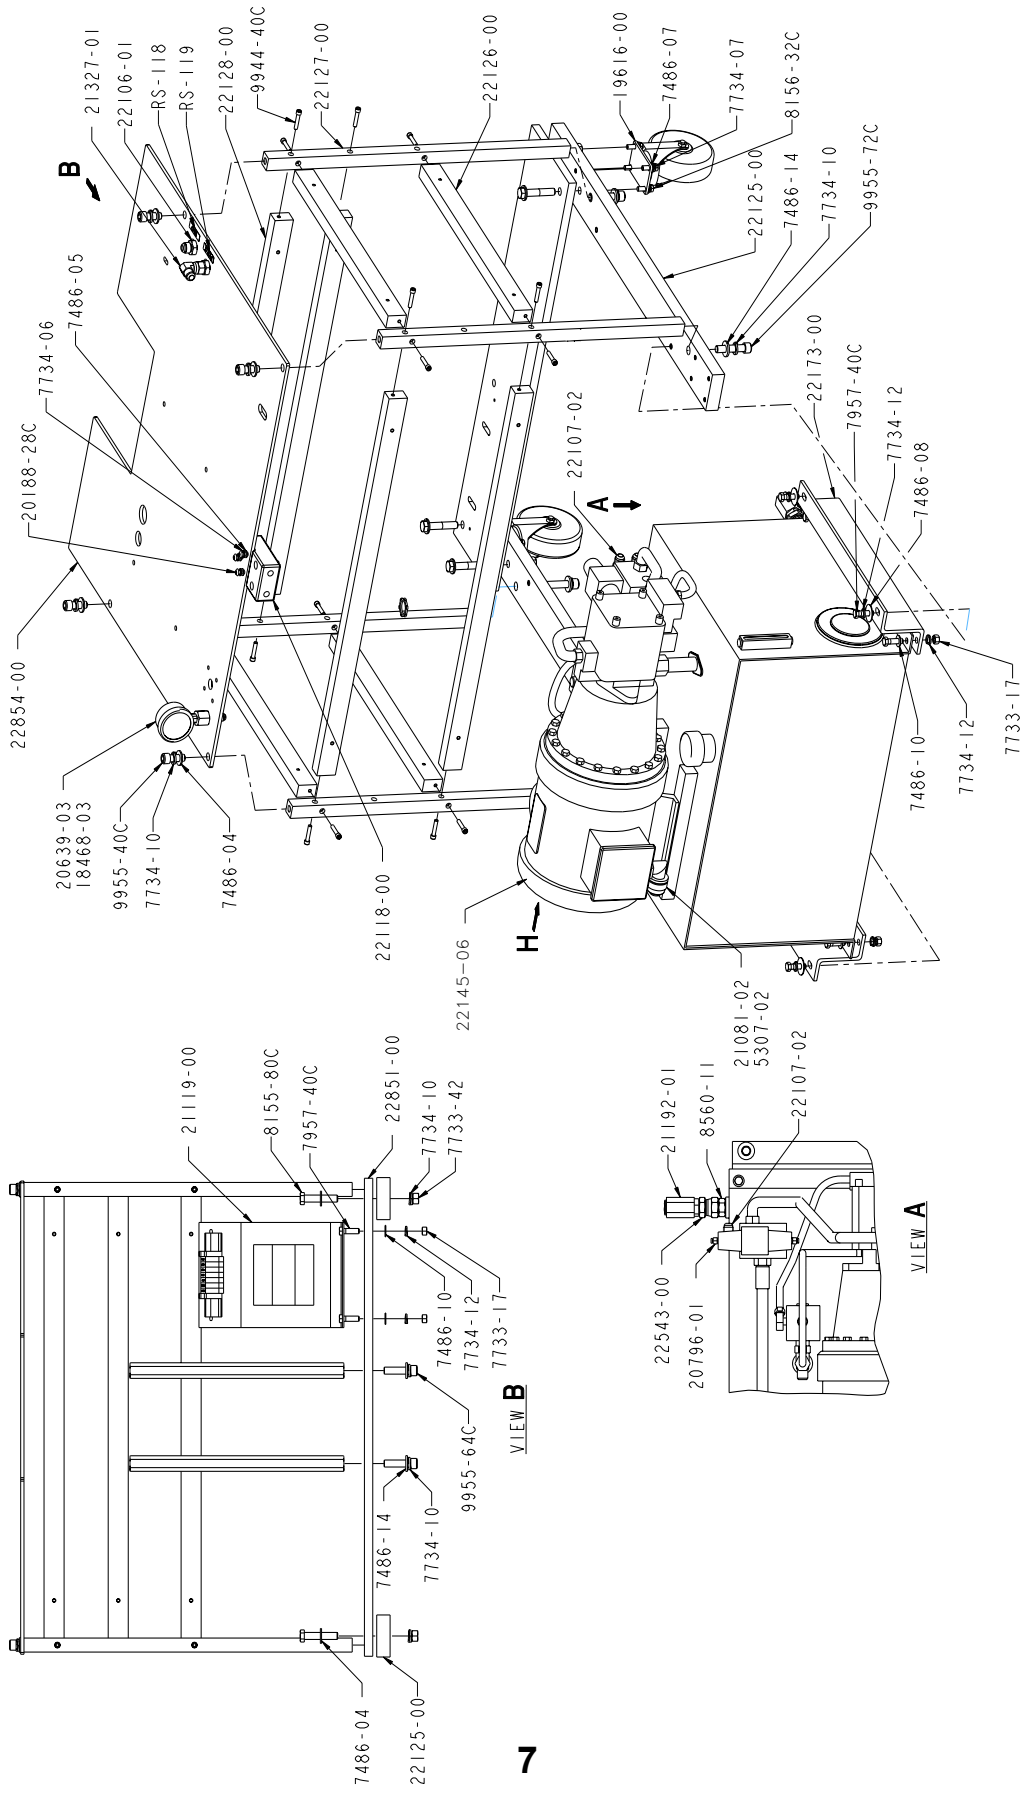


22850-01A MH III A System Assembly

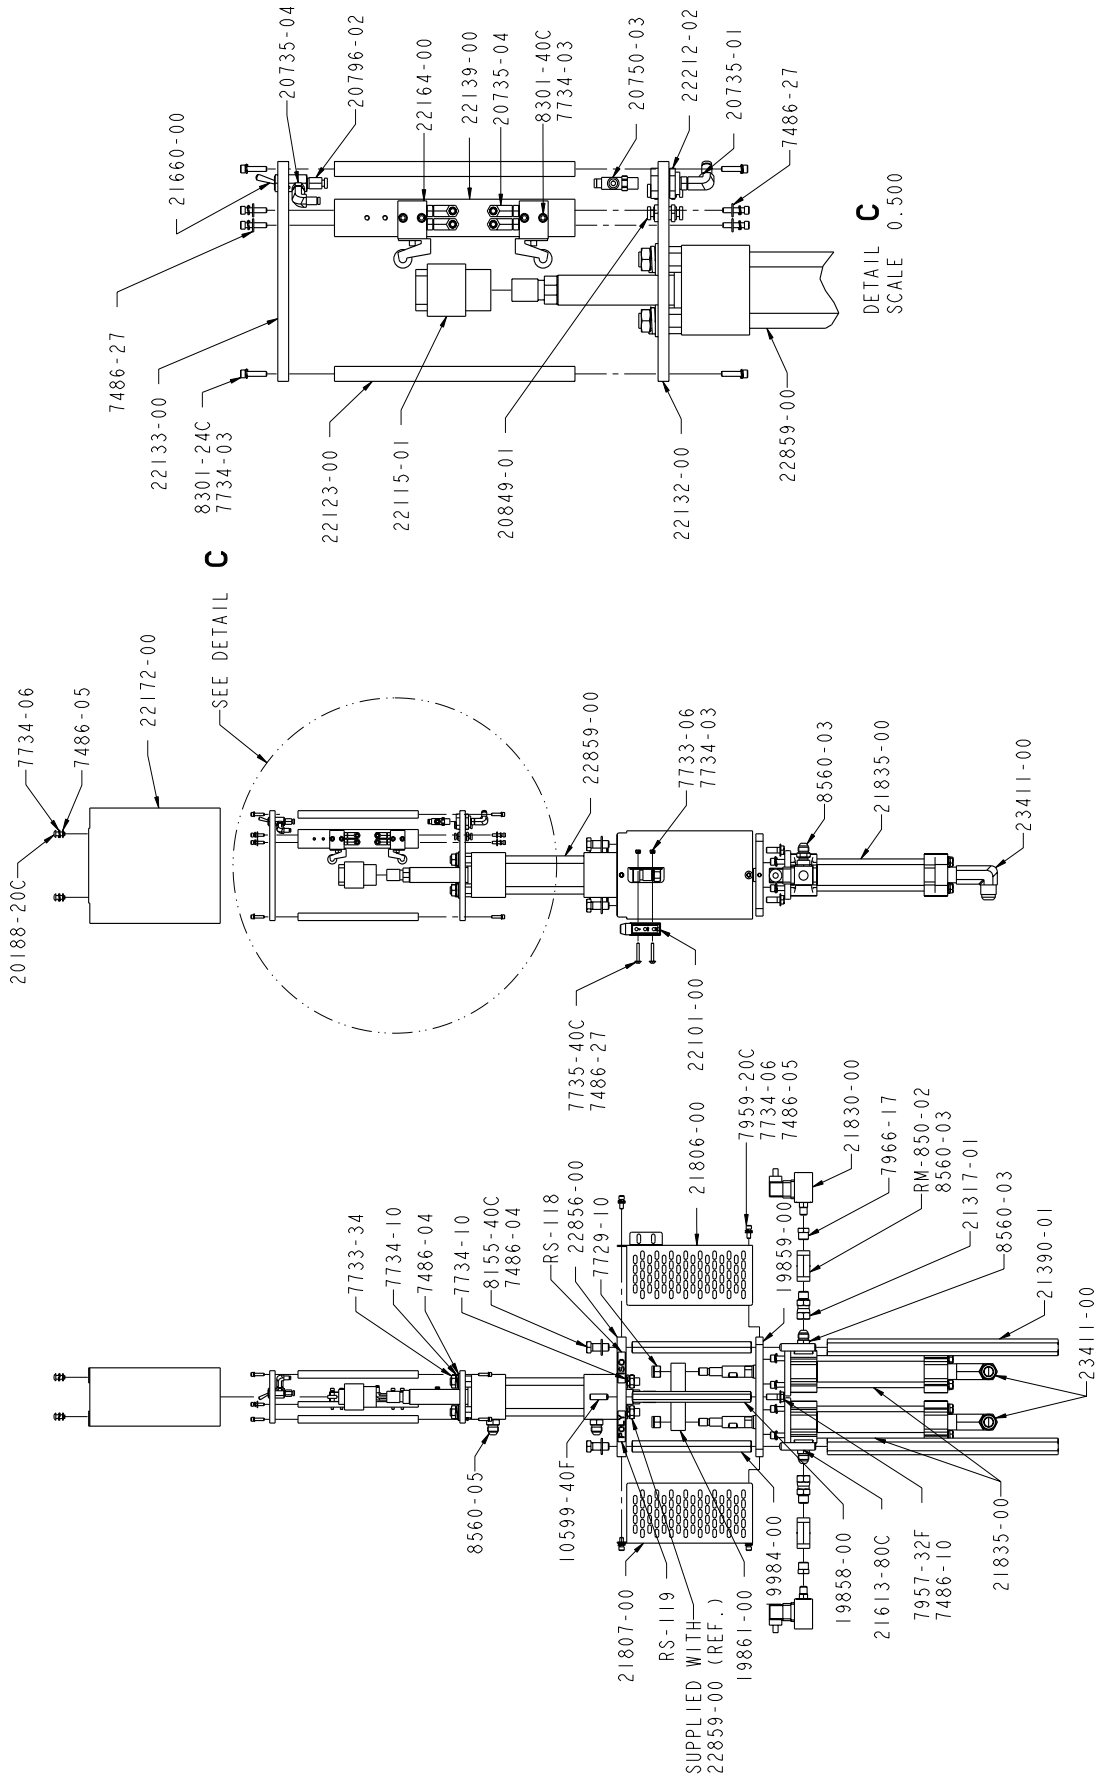


C
DETAIL
SCALE 0.500


22850-01A MH III A System Assembly

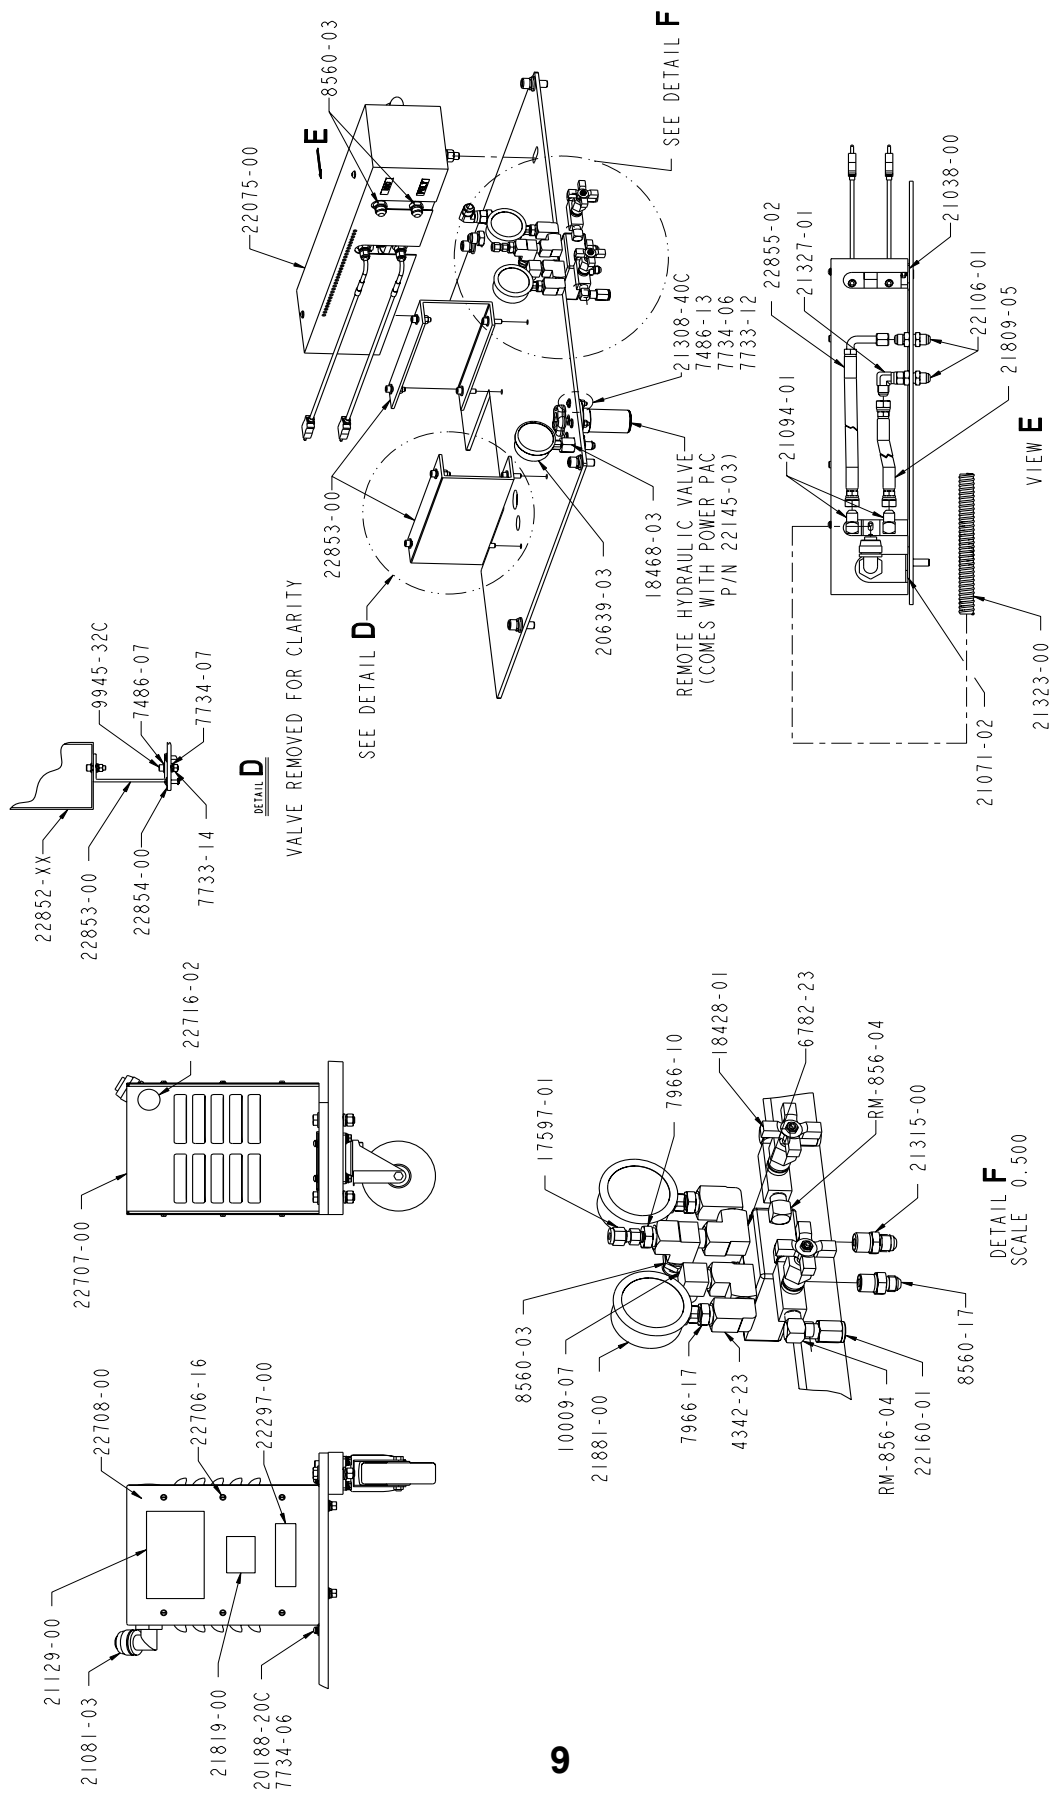


22850-01A MH III A System Assembly

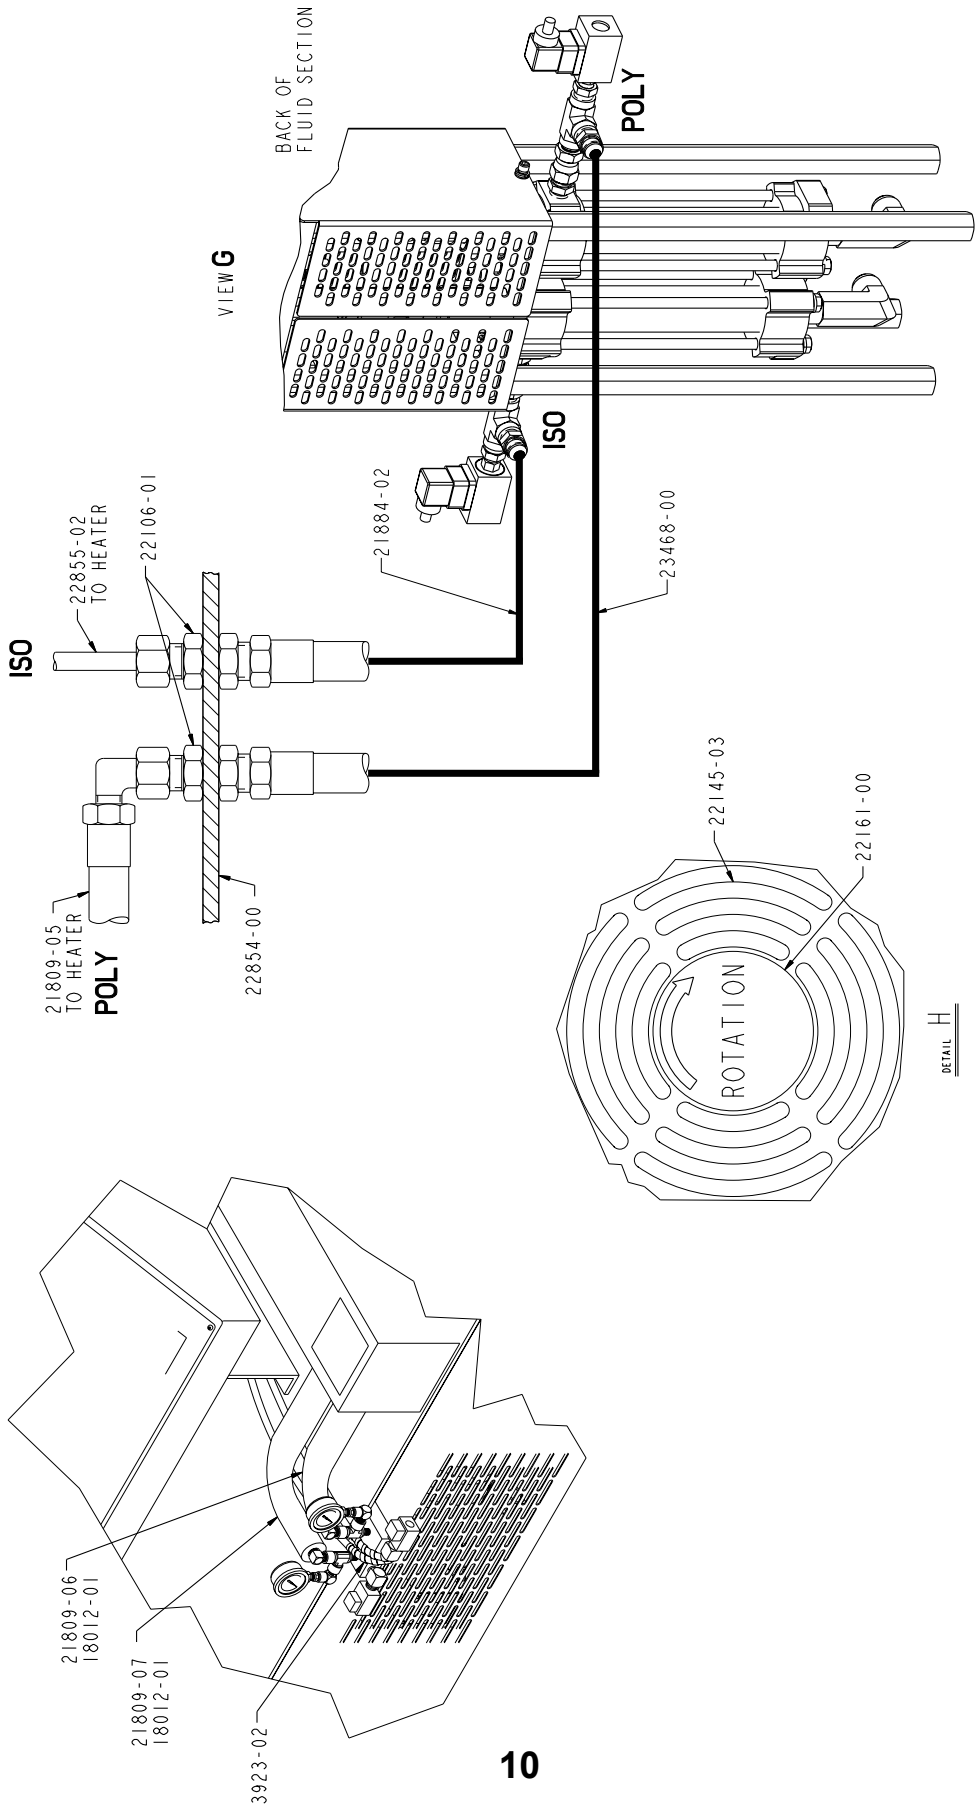

22850-01A MH III A System Assembly

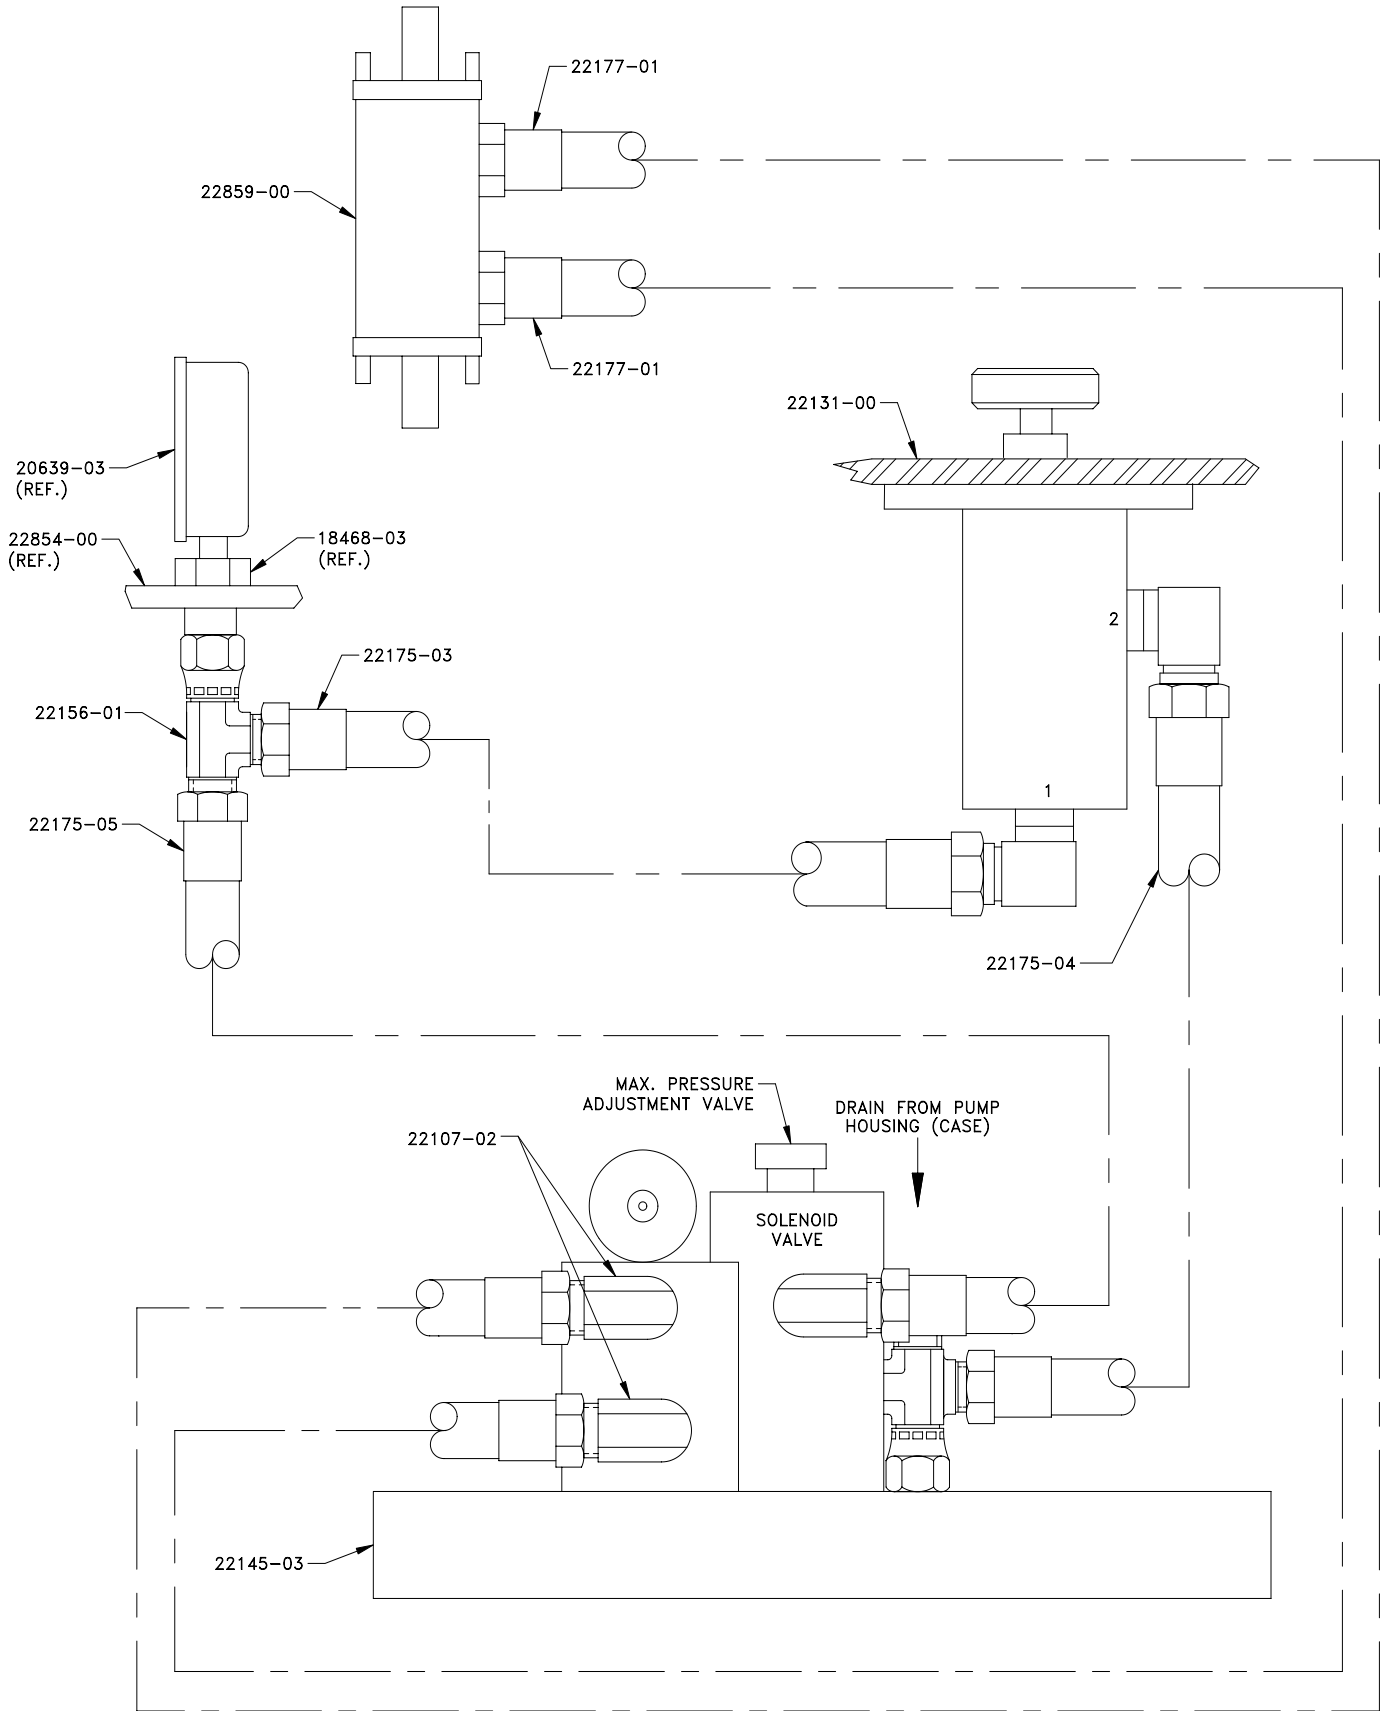

22850-01A MH III A System Assembly

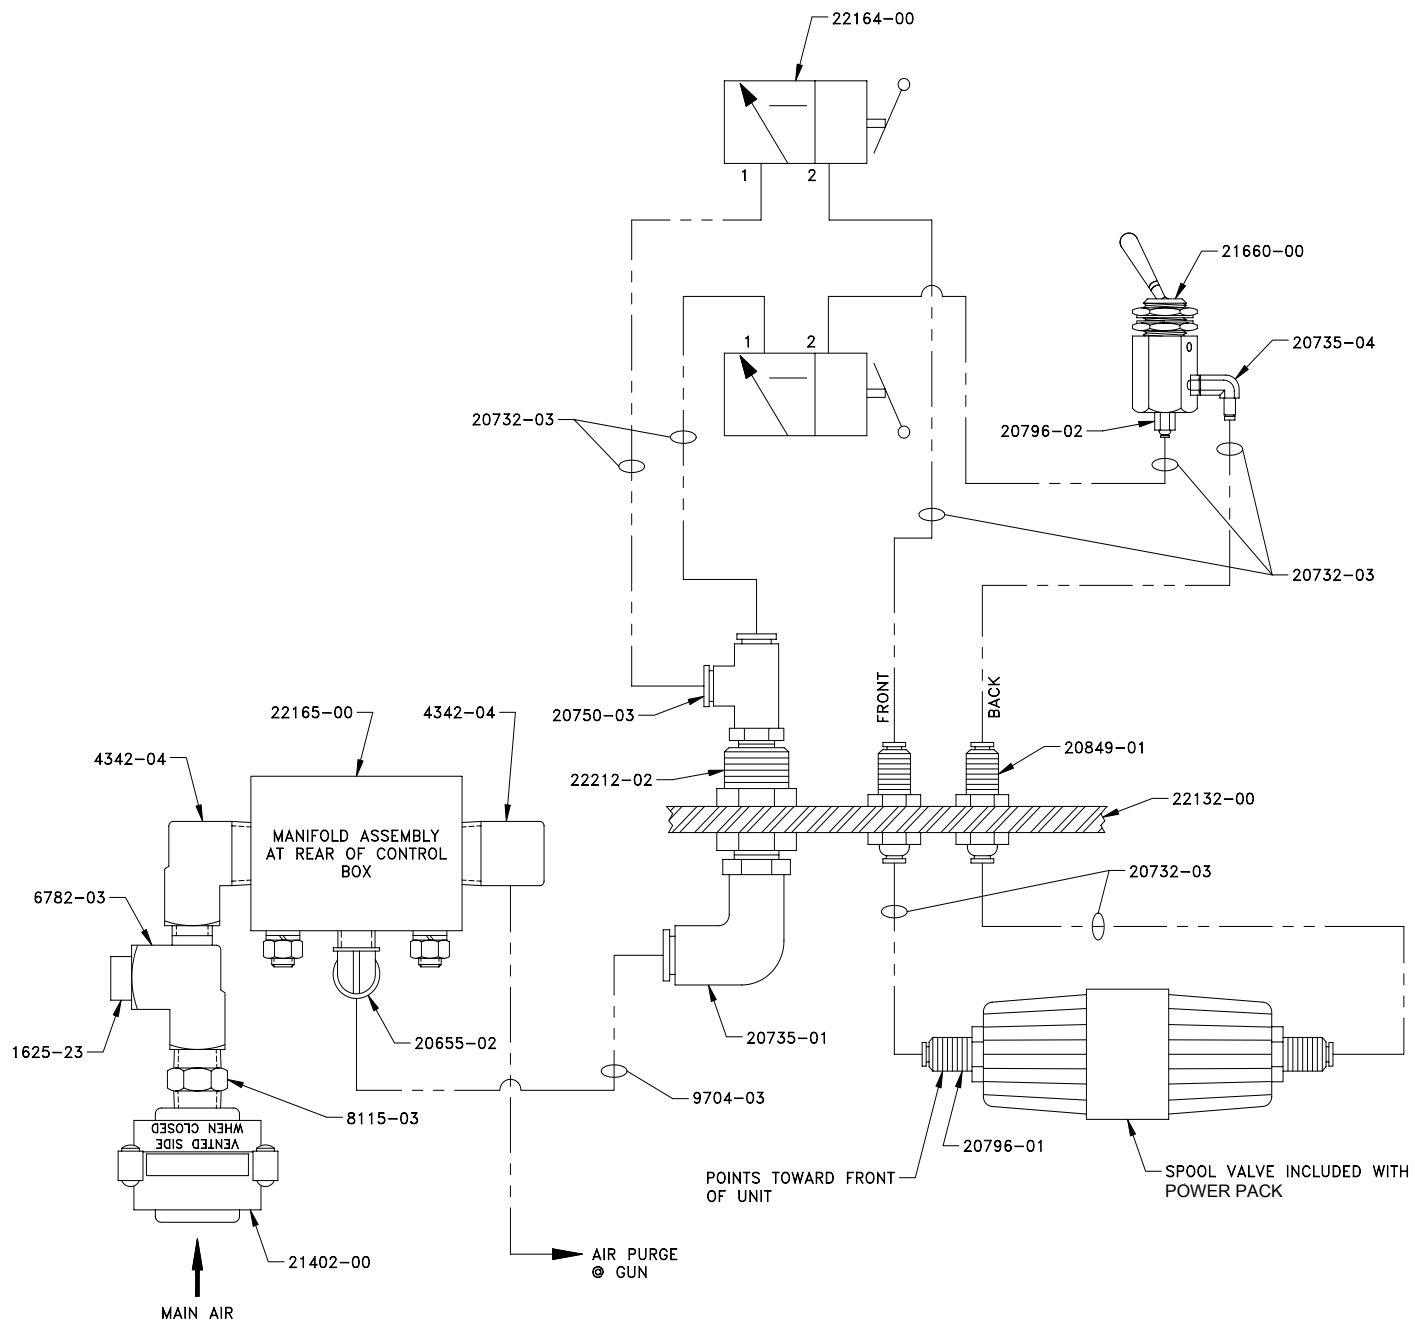

22850-01A MH III A System Assembly Parts List

Part Number	Description
RM-850-02	TEE FITTING
RM-856-04	ELBOW FITTING
RS-118	ISO DECAL
RS-119	POLY DECAL
10009-04	ELBOW FITTING
10009-06	ELBOW FITTING
10009-07	ELBOW FITTING
10599-40F	SET SCREW
13424-03	CABLE TIE
14638-04	RIVET
17597-01	CONNECTOR FITTING
18012-01	HEATED HOSE COVER
18428-01	NEEDLE VALVE
18468-03	FITTING
19507-04	AIR HOSE ASSEMBLY
19616-00	SWIVEL CASTER
19858-00	AIR MOTOR STAND-OFF
19859-00	PUMP MOUNTING PLATE
19861-00	PUMP SADDLE
19984-00	AIR MOTOR STAND-OFF
20188-20C	SCREW
20188-28C	SCREW
20639-03	GAUGE
20732-03	TUBING
20735-01	ELBOW FITTING
20735-04	ELBOW FITTING
20750-03	SWIVEL TEE FITTING
20796-01	FITTING
20796-02	FITTING
20849-01	UNION BULKHEAD FITTING
21094-01	ELBOW FITTING
21119-00	TRANSFORMER
21129-00	TRANSFORMER DECAL
21308-40C	MACHINE SCREW
21315-00	CONNECTOR FITTING
21317-01	SWIVEL FITTING
21323-00	FLEXIBLE CONDUIT
21327-01	ELBOW FITTING
21390-01	AIR MOTOR STAND-OFF
21613-80C	SET SCREW
21660-00	2-WAY CONTROL VALVE
21806-00	LEFT GUARD
21807-00	RIGHT GUARD
21809-05	MATERIAL HOSE
21809-06	MATERIAL HOSE
21809-07	MATERIAL HOSE


Part Number	Description
21819-00	LIVE WIRE DECAL
21835-00	PUMP ASSEMBLY
21847-00	CE PLATE
21881-00	PRESSURE GAUGE
21884-02	MATERIAL HOSE
22074-00	THERMOCOUPLE ASSEMBLY
22075-00	HEAT EXCHANGER ASSEMBLY
22083-00	RUN DECAL
22084-00	RETRACT DECAL
22088-06	POLY ELECTRIC PLUG ASSEMBLY
22093-00	ELECTRIC PLUG
22105-00	(ISO) HEAT EXCHANGER ASSEMBLY
22101-00	ROLLER LIMIT SWITCH
22106-01	BULKHEAD FITTING
22107-02	ELBOW FITTING
22110-00	(POLY) HEAT EXCHANGER ASSEMBLY
22115-01	UPPER SHAFT CAM ADAPTER
22118-00	ISOLATION HOSE MOUNTING BLOCK
22123-00	CHANGEOVER STAND-OFF
22124-00	BOTTOM PUMP BRACKET
22125-00	MOUNTING PLATE
22126-00	SIDE FRAME SUPPORT
22127-00	VERTICAL FRAME SUPPORT
22128-00	FRONT FRAME SUPPORT
22132-00	BOTTOM CHANGEOVER PLATE
22133-00	TOP CHANGEOVER PLATE
22139-00	LIMIT SWITCH MOUNTING BRACKET
22145-06	HYDRAULIC MOTOR
22155-00	DECAL HYDRAULIC PRESSURE
22156-01	TEE FITTING
22160-01	CAP
22161-00	ROTATION DECAL
22164-00	DIRECTIONAL CONTROL VALVE
22167-00	FRONT HYDRAULIC MOTOR COVER
22169-00	SIDE HYDRAULIC MOTOR COVER
22172-00	COUNTER CHANGEOVER GUARD
22173-00	HYDRAULIC PUMP SUPPORT BRACKET
22175-03	MATERIAL HOSE
22175-04	MATERIAL HOSE
22175-05	MATERIAL HOSE
22177-01	MATERIAL HOSE
22212-02	BULKHEAD FITTING
22297-00	CONNECTION NOTICE DECAL
22543-00	SWIVEL FITTING

22850-01A MH III A System Assembly Parts List

Part Number	Description
22706-16	SCREW
22707-00	TRANSFORMER COVER
22716-02	HOLE PLUG
22851-00	BOTTOM BRACKET
22852-01A	CONTROL BOX ASSEMBLY
22853-00	CONTROL BOX SUPPORT
22854-00	MOUNTING PLATE
22855-02	MATERIAL HOSE
22856-00	MOUNTING PLATE
22859-00	HYDRAULIC CYLINDER
22861-00	REAR GUARD
23411-00	ELBOW FITTING
23468-00	HOSE
3795-00	TERMINAL RING LUG
3923-02	SPIRAL WRAP
4342-23	TEE PIPE FITTING
5307-02	CONDUIT NUT
6782-23	TEE FITTING
7208-02	WIRE NUT
7208-04	WIRE NUT
7486-04	FLAT WASHER
7486-05	FLAT WASHER
7486-07	FLAT WASHER
7486-08	FLAT WASHER
7486-10	LOCK WASHER
7486-13	FLAT WASHER
7486-14	FLAT WASHER
7486-27	FLAT WASHER
7729-10	NUT
7733-06	NUT
7733-12	NUT
7733-14	NUT
7733-17	NUT
7733-34	NUT
7733-42	NUT
7734-03	LOCK WASHER
7734-06	LOCK WASHER
7734-07	LOCK WASHER
7734-10	LOCK WASHER
7734-12	LOCK WASHER
7735-40C	SCREW
7957-40C	SCREW
7958-32C	SCREW
7957-32F	SCREW
7957-40F	SCREW
7959-20C	SCREW


Part Number	Description
7966-10	PIPE FITTING
7966-17	PIPE FITTING
8155-40C	SCREW
8155-80C	SCREW
8156-32C	SCREW
8301-24C	SCREW
8301-40C	SCREW
8560-03	CONNECTOR FITTING
8560-05	CONNECTOR FITTING
8560-11	CONNECTOR FITTING
8560-17	CONNECTOR FITTING
8846-03	COPPER WIRE
9704-03	TUBING
9944-40C	SCREW
9945-32C	SCREW
9955-40C	SCREW
9955-64C	SCREW
9955-72C	SCREW

22852-01A MH III A Control Box Assembly

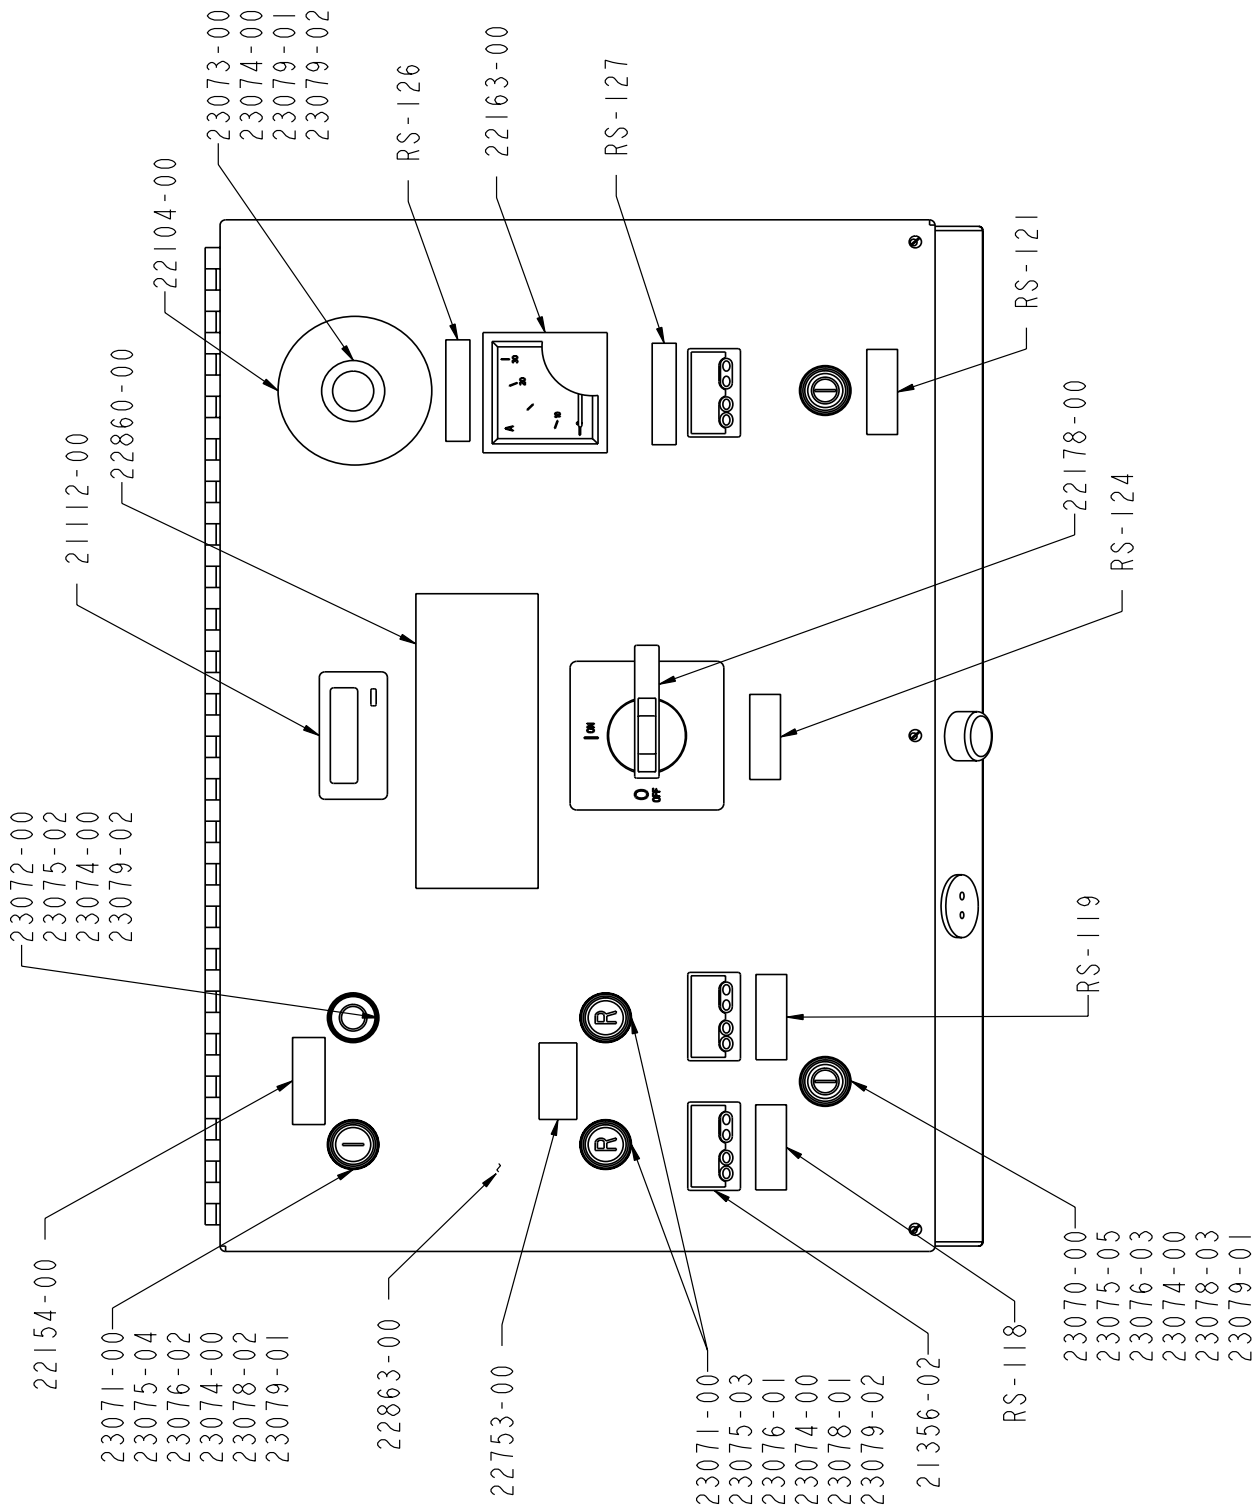


SECTION
A-A

22852-01A MH III A Control Box Assembly


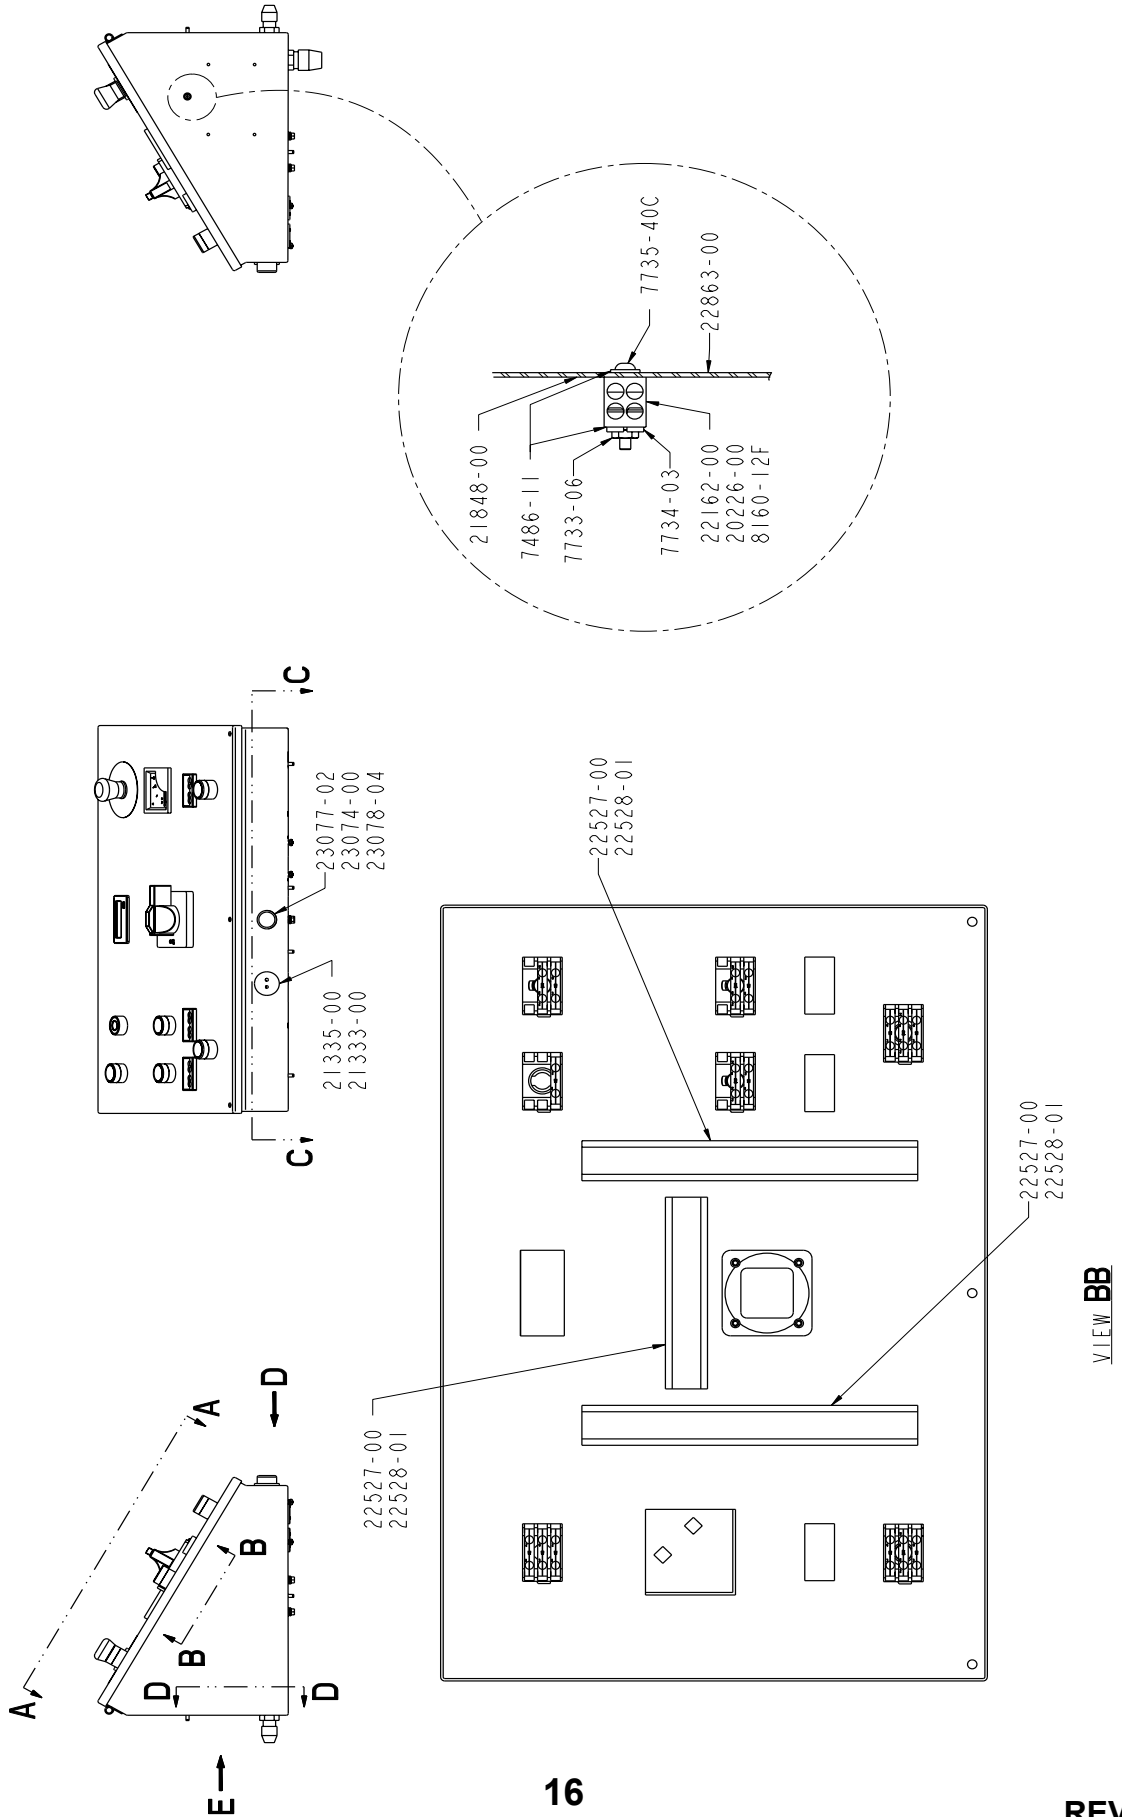


22852-01A MH III A Control Box Assembly

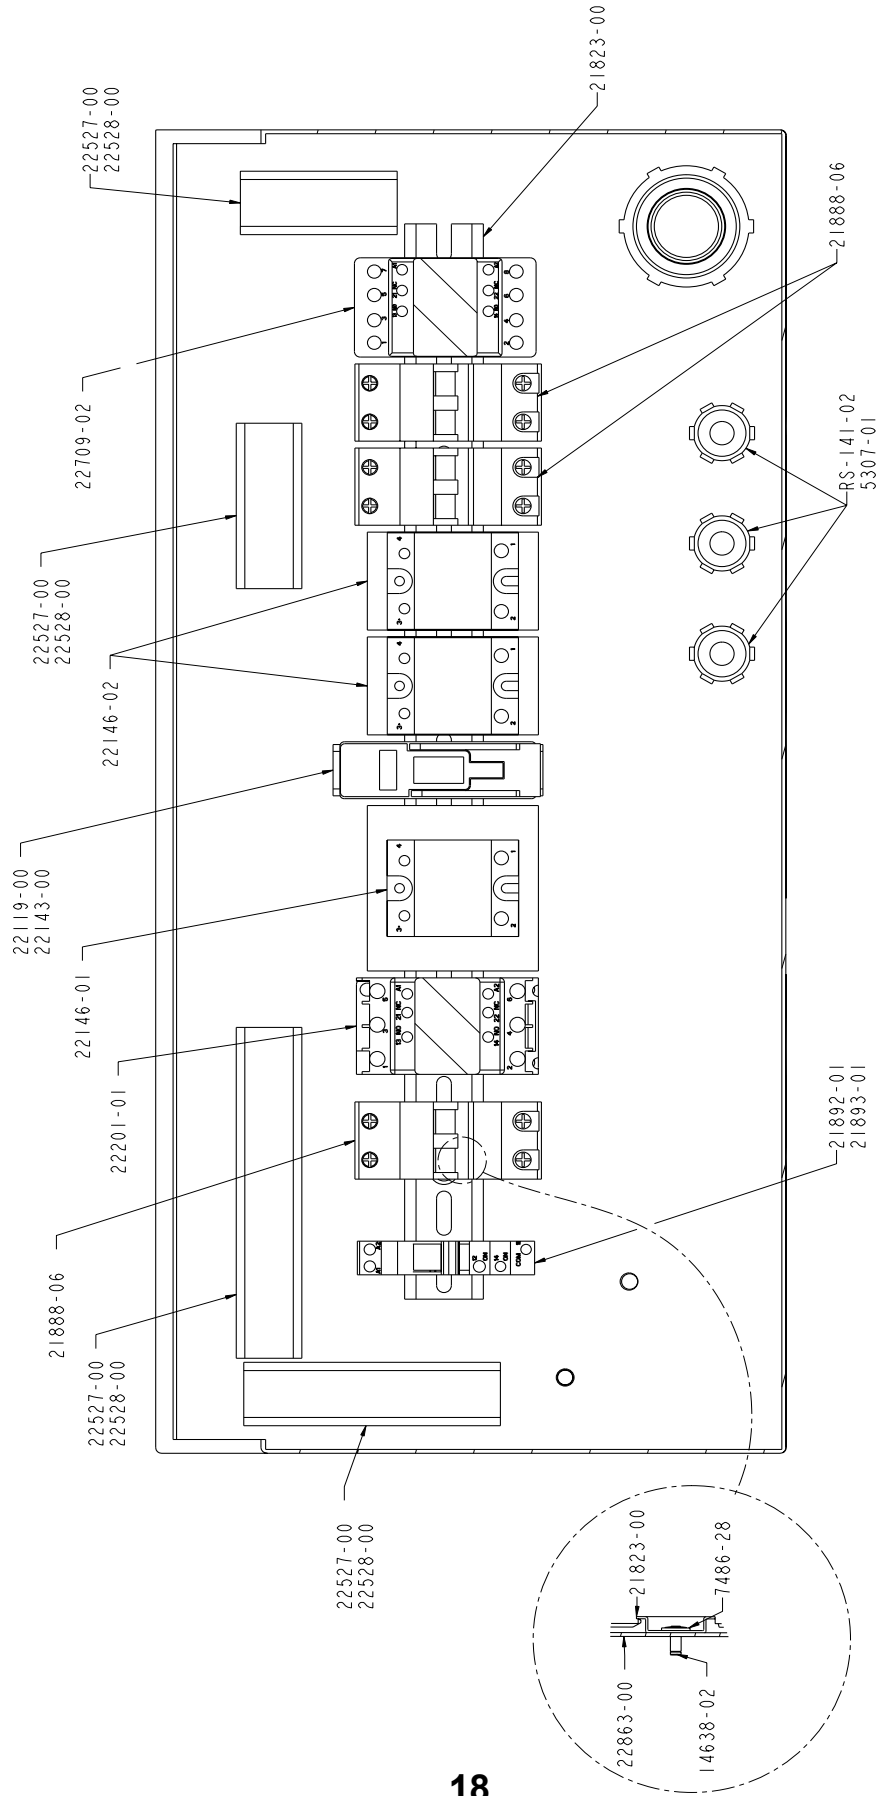


SECTION **D-D**

22852-01A MH III A Control Box Assembly

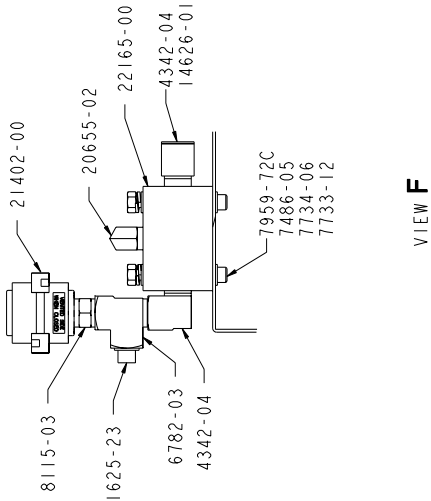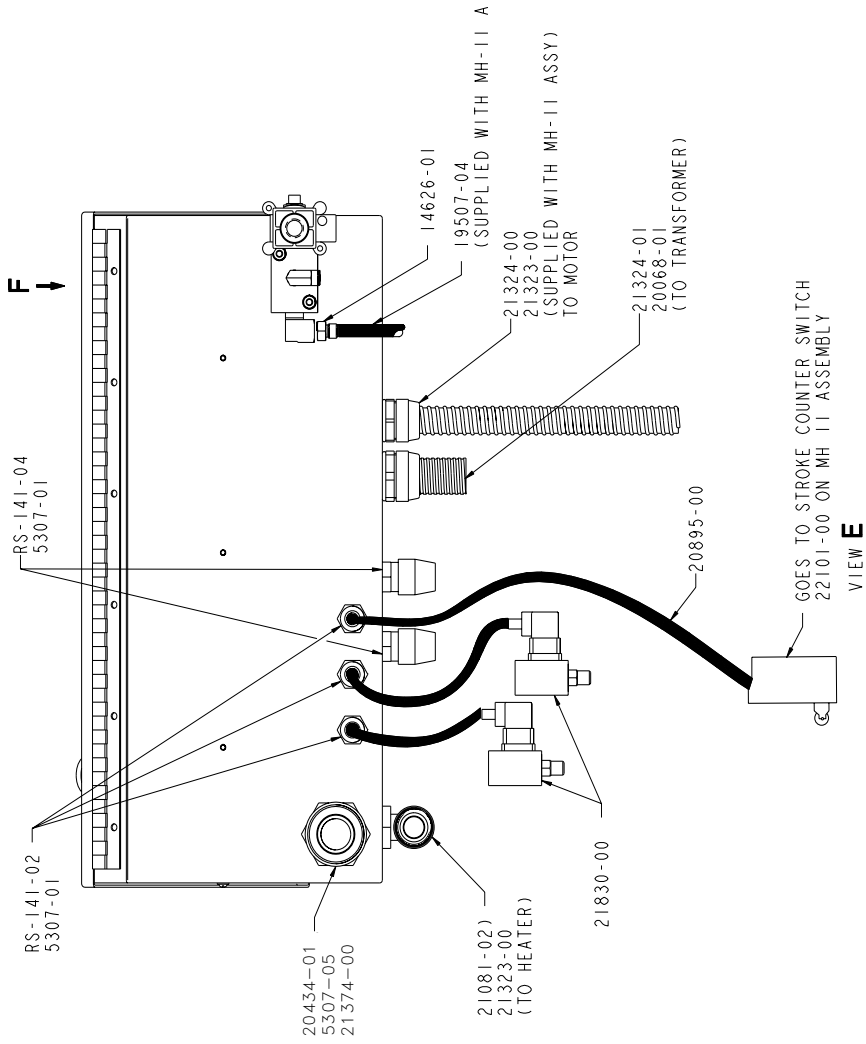

22852-01 MH III A System Ladder Schematic

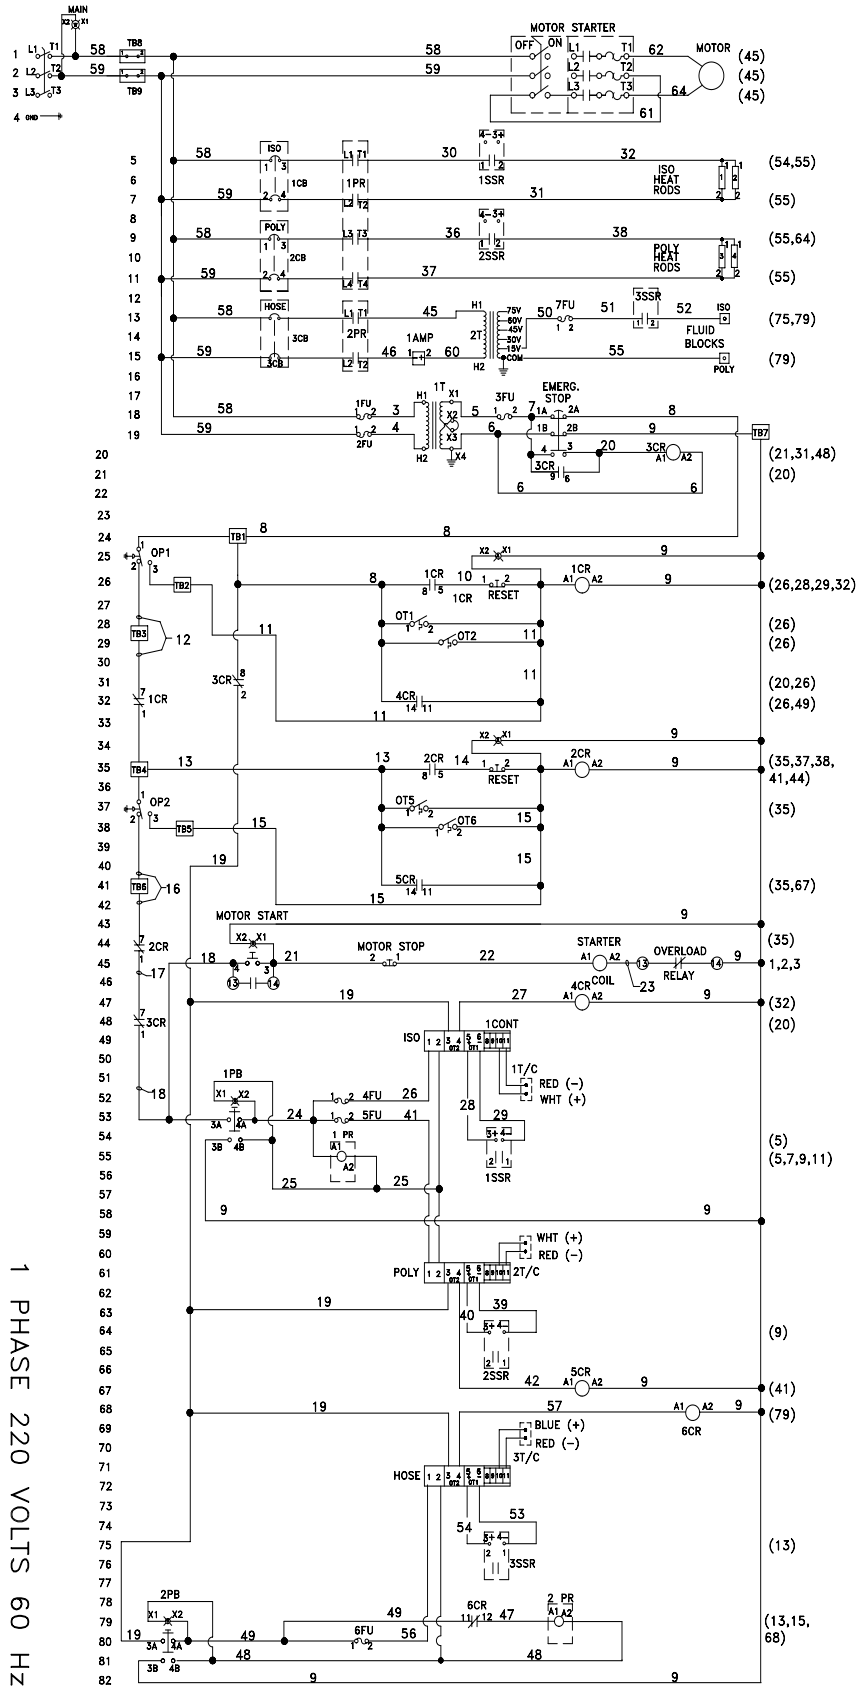

22852-01A MH III A System Assembly Parts List

Part Number	Description	Qty.
13424-01	CABLE TIE	25
14626-01	FITTING	1
14638-02	RIVET	7
1625-23	PLUG FITTING	1
17883-08	#8 WIRE	-
19510-01	TERMINAL RING	8
20068-01	FLEXIBLE CONDUIT	1.583
20226-00	SET SCREW	1
20434-01	CABLE STRAIN RELIEF	1
20655-02	ELBOW FITTING	1
20895-00	CABLE	3.83
21081-02	CONNECTOR	1
21110-00	#6 WIRE	
21112-00	LCD COUNTER	1
21150-00	TERMINAL LUG	4
21164-00	1/2AMP FUSE	3
21164-02	2AMP FUSE	3
21324-00	PLASTIC CONDUIT	1
21324-01	PLASTIC CONDUIT	1
21333-00	THERMOCOUPLE-GRADE WIRE	
21334-00	THERMOCOUPLE-GRADE WIRE	
21335-00	CIRCULAR PANEL JACK	1
21356-02	MICROPROCESSOR	3
21374-00	ELECTRIC CABLE	12 FT.
21402-00	LOCKOUT VALVE	1
21722-00	MOUNTING BRACKET	1
21823-00	DIN RAIL	3.25
21824-16C	SCREW	4
21830-00	HIGH PRESSURE SWITCH	2
21848-00	PE DECAL	1
21888-06	CIRCUIT BREAKER	3
21888-07	CIRCUIT BREAKER	1
21889-00	FUSEHOLDER	6
21892-01	FINDER RELAY	3
21893-01	SOCKET RELAY	3
22104-00	EMERGENCY STOP DECAL	1
22119-00	FUSE BLOCK	1
22142-00	TRANSFORMER	1
22143-00	63AMP FUSE	1
22146-01	SOLID STATE RELAY	1
22146-02	SOLID STATE RELAY	2
22154-00	HYDRAULIC POWER DECAL	1
22157-00	TERMINAL BLOCK	2


Part Number	Description	Qty.
22158-00	TERMINAL BLOCK SPACER	4
22159-00	TERMINAL BLOCK COVER	1
22162-00	CONDUCTOR CONNECTOR	1
22163-00	AMMETER	1
22165-00	SPOOL VALVE MANIFOLD	1
22171-03	ON/OFF SWITCH	1
22174-03	ON/OFF SWITCH COVER	1
22178-00	POWER SWITCH	1
22201-01	MECHANICAL CONTACTOR	1
22422-01	RELAY	3
22423-01	RELAY SOCKET	3
22502-00	CIRCULAR PANEL JACK	2
22506-00	TERMINAL	7
22507-00	TERMINAL END COVER	1
22527-00	WIRING DUCT COVER	6.521
22528-00	WIRING DUCT	4.354
22528-01	WIRING DUCT	2.167
22709-02	MECHANICAL CONTACTOR	1
22753-00	OVERPRESSURE DECAL	1
22849-03	CONTROLLER	1
22860-00	MH-2 DECAL	1
22863-00	CONTROL BOX	1
23070-00	LATCHED PUSHBUTTON	2
23071-00	LATCHED PUSHBUTTON	3
23072-00	MONENTARY PUSHBUTTON	1
23073-00	E-STOP PUSHBUTTON	1
23074-00	PUSHBUTTON COUPLING PLATE	8
23075-02	"O" INSCRIPTION CAP	1
23075-03	"R" INSCRIPTION CAP	2
23075-04	"I" INSCRIPTION CAP	1
23075-05	"I/O" INSCRIPTION CAP	2
23076-01	YELLOW CAP	2
23076-02	CLEAR CAP	1
23076-03	GREEN CAP	2
23077-02	WHITE PILOT LIGHT	1
23078-01	YELLOW LED	2
23078-02	WHITE LED	1
23078-03	GREEN LED	2
23078-04	WHITE LED	1
23079-01	OPEN CONTACT BLOCK	6
23079-02	CLOSED CONTACT BLOCK	5

22852-01A MH III A System Assembly Parts List

Part Number	Description	Qty.
3201	PLASTIC TONGUE	3
3795-00	TERMINAL LUG	4
3800-03	WIRE	-
3800-08	WIRE	-
4160-00	RING TERMINAL LUG	2
4342-04	ELBOW FITTING	2
5307-01	CONDUIT NUT	5
5307-05	CONDUIT NUT	1
6663-00	#10 TERMINAL RING	2
6782-03	TEE FITTING	1
7208-02	#10 WIRE NUT	4
7208-04	#16 WIRE NUT	4
7361-00	TERMINAL RING LUG	9
7486-05	WASHER	6
7486-11	WASHER	2
7486-27	WASHER	4

Part Number	Description	Qty.
7486-28	WASHER	7
7733-06	HEX NUT	5
7733-12	HEX NUT	2
7734-03	LOCK WASHER	5
7734-06	LOCK WASHER	4
7735-40C	SCREW	1
7750-02	14 WIRE	-
7750-04	WIRE	-
7793-00	TERMINAL RING	2
7959-72C	SCREW	2
8115-03	NIPPLE FITTING	1
8160-12F	SET SCREW	4
8846-03	#10 WIRE	
8847-08	WIRE	
9897-24C	SCREW	2
RS-118	ISO DECAL	2
RS-119	POLY DECAL	2
RS-121	HOSE DECAL	1
RS-124	MAIN DECAL	1
RS-126	HOSE CURRENT DECAL	1
RS-127	HOSE CONTROL DECAL	1
RS-141-02	STRAIGHT GRIP CORD	3
RS-141-04	STRAIGHT GRIP CORD	2

21835-00 Fluid Section Assembly





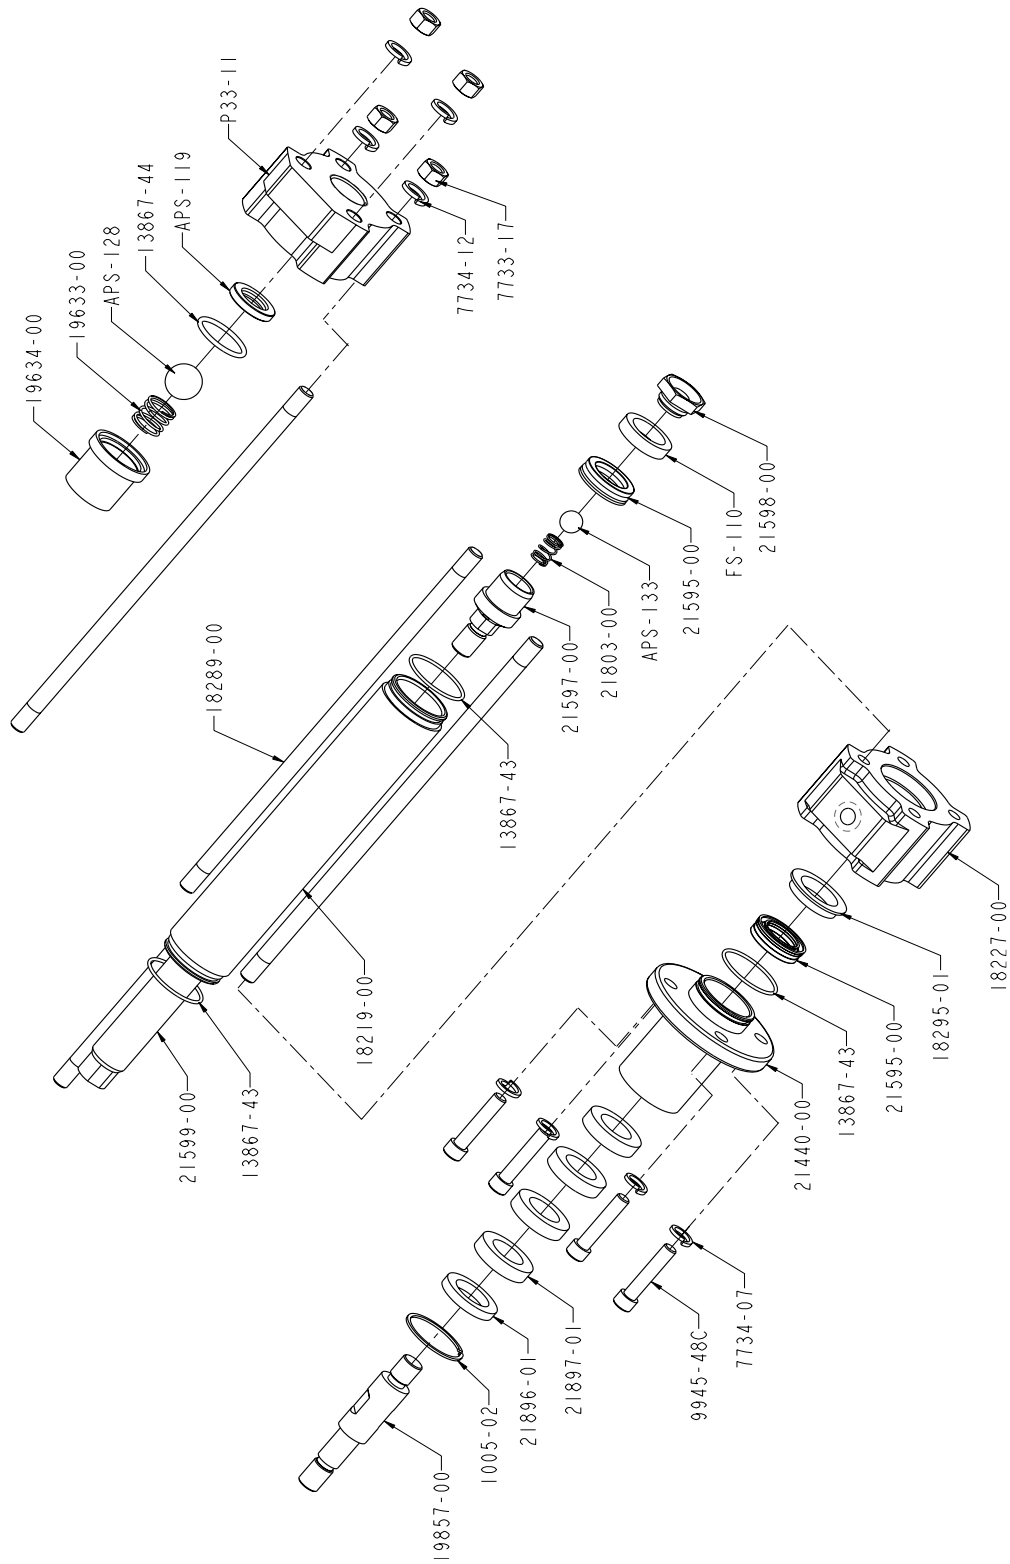


REPAIR KIT: 21845-00

21835-00 Fluid Section Assembly Parts List


Part Number	Description	Qty.
APS-119	FOOT VALVE SEAT	1
APS-128	CHROME BALL	1
APS-133	SST BALL	1
FS-110	NYLON PISTON GUIDE	1
P33-11	PUMP BASE	1
1005-02	SNAP RING	1
13867-43	O-RING	3
13867-44	O-RING	1
18219-00	PUMP CYLINDER	1
18227-00	AIRLESS PUMP HEAD	1
18289-00	PUMP TIE ROD	4
18295-01	SUPPORT WASHER	1
19633-00	COMPRESSION SPRING	1
19634-00	FOOT VALVE HOUSING	1
19857-00	PUMP SHAFT EXTENSION	1
21440-00	SOLVENT CUP ADAPTER	1
21595-00	PUMP SEAL	2
21597-00	TRANSFER HOUSING	1
21598-00	TRANSFER SEAT	1
21599-00	PUMP SHAFT	1
21803-00	COMPRESSION SPRING	1
21896-01	PACKING RETAINER	1
21897-01	FELT WIPER	4
7733-17	HEX NUT	4
7734-07	LOCK WASHER	4
7734-12	LOCK WASHER	4
9945-48C	SCREW	4

22075-00 Heat Exchanger Assembly

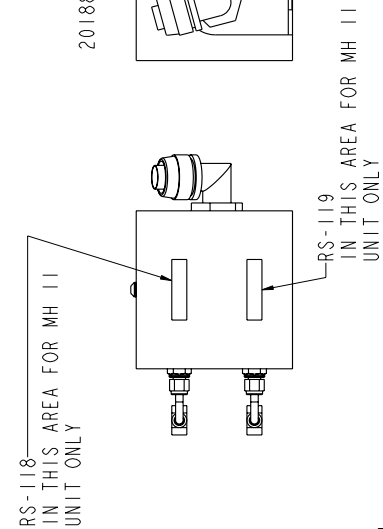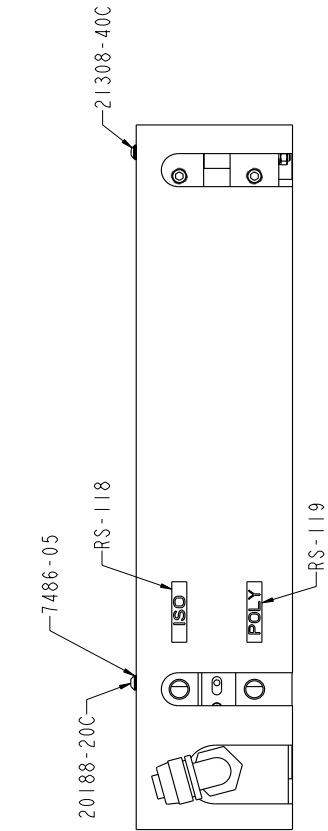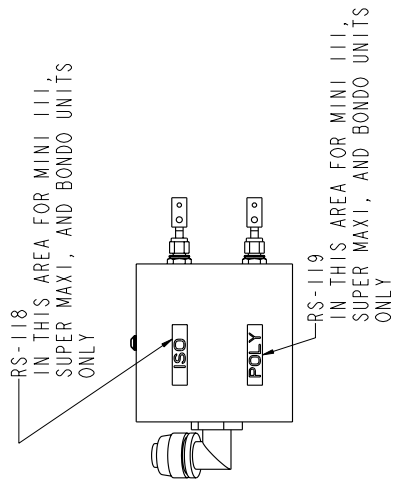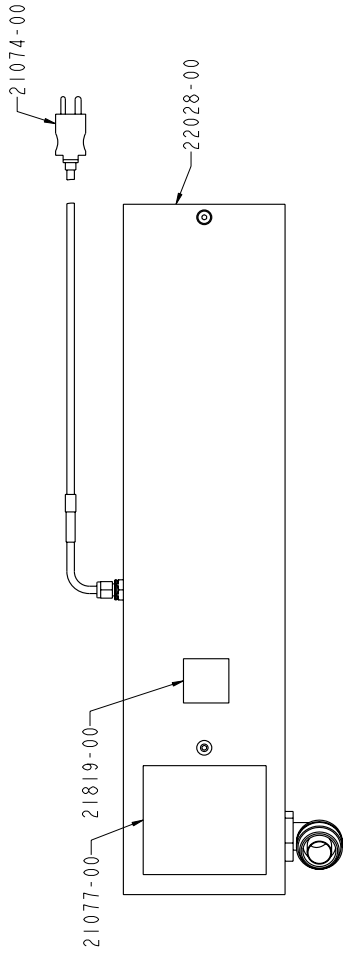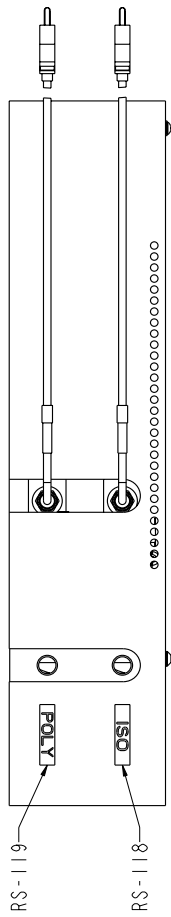


22075-00 Heat Exchanger Assembly

GLASCRAFT P/N	A (QTY 4)
22075-00	22019-00
22075-01	22019-01

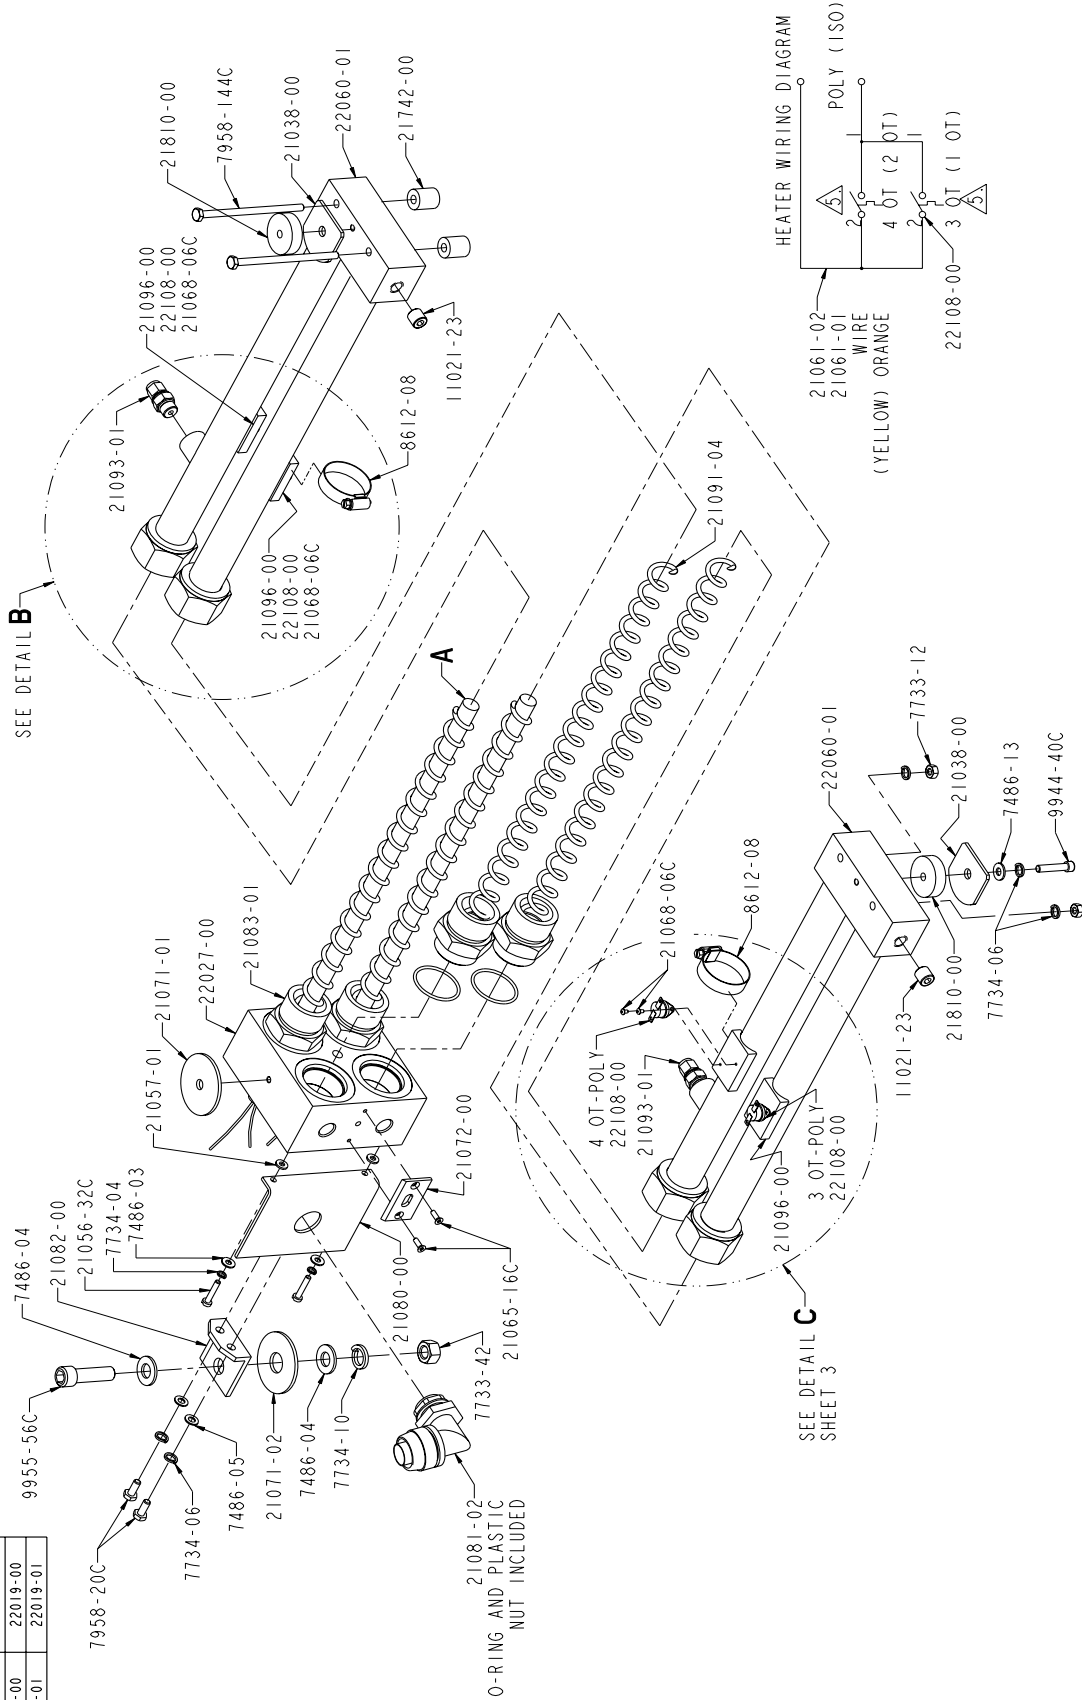

22075-00 Heat Exchanger Assembly

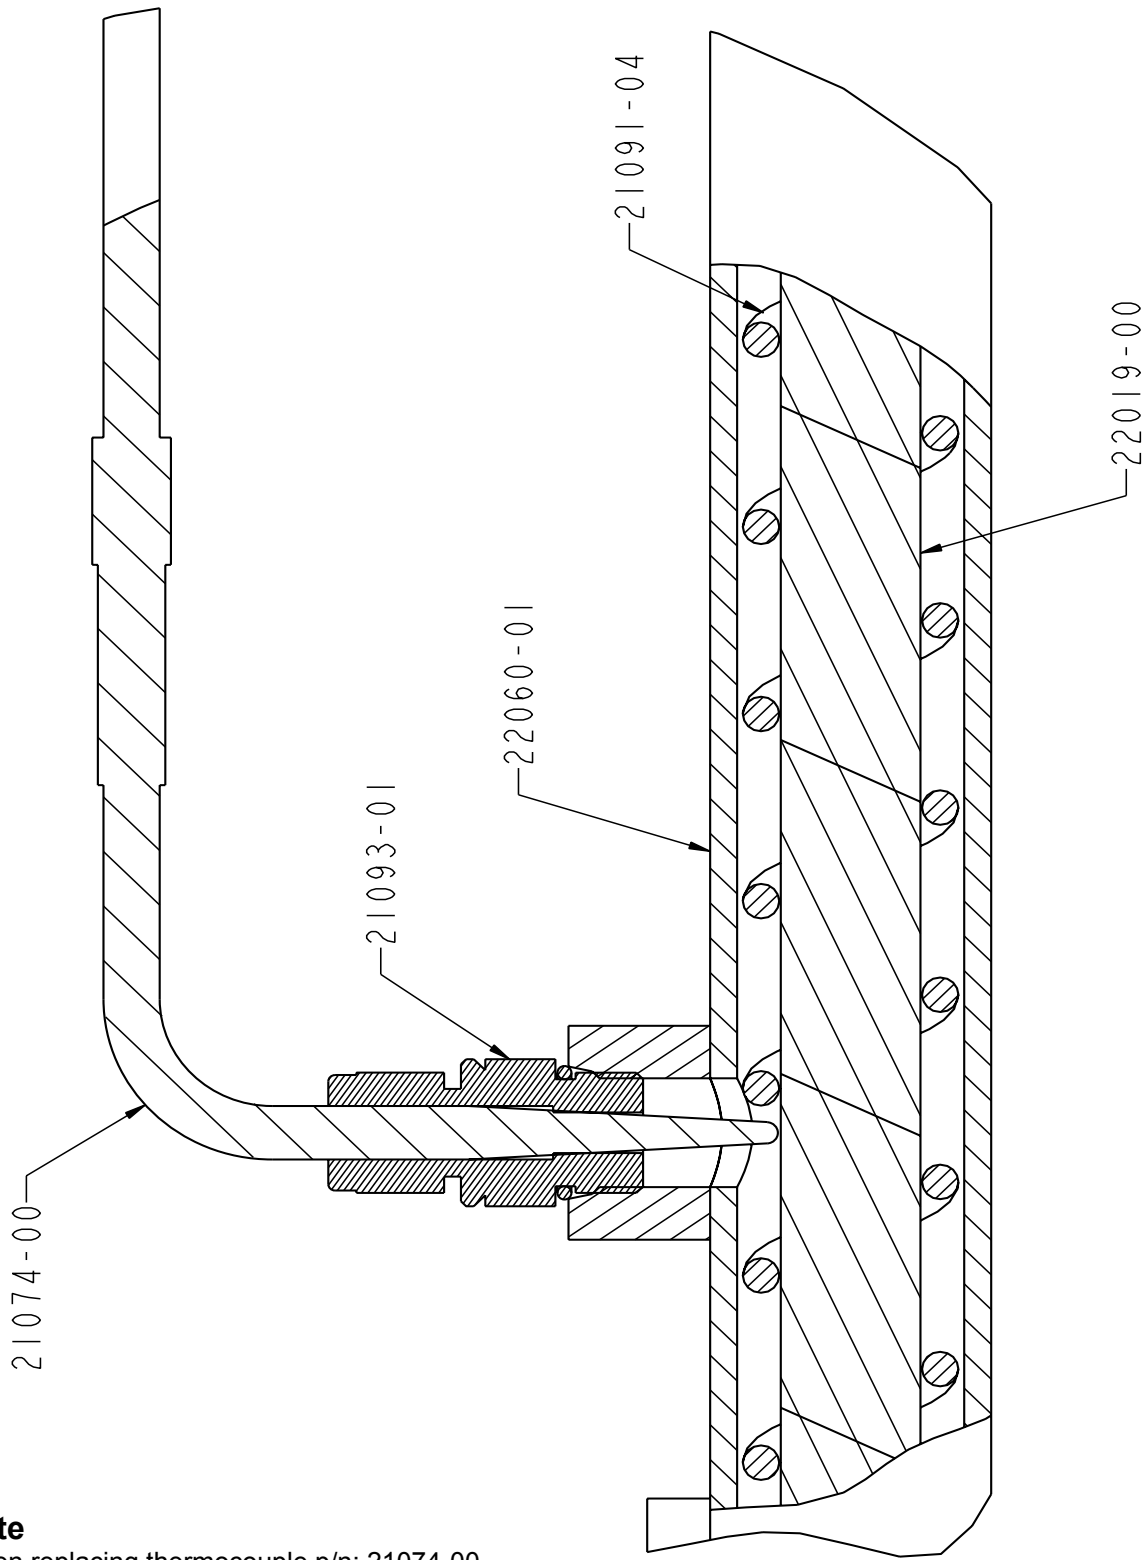


Note
When replacing thermocouple p/n: 21074-00, use kit p/n: 21214-01. Be sure thermocouple is touching heater element before tightening.

22075-00 Heat Exchanger Assembly Parts List


Part Number	Description	Qty.
RS-118	ISO DECAL	3
RS-119	POLY DECAL	3
11021-23	PIPE PLUG	2
20188-20C	SCREW	1
21038-00	HARD FIBER WASHER	2
21056-32C	SCREW	2
21057-01	GLASS FIBER WASHER	2
21061-01	WIRE	0
21061-02	WIRE	0
21065-16C	SCREW	2
21068-06C	SCREW	8
21071-01	HARD FIBER WASHER	1
21071-02	HARD FIBER WASHER	1
21072-00	INSULATOR PAD	1
21074-00	THERMOCOUPLE	2
21077-00	DANGER HIGH VOLTAGE DECAL	1
21080-00	MOUNTING BRACKET CONNECTOR	1
21081-02	SWIVELLOK CONNECTOR	1
21082-00	MOUNTING BRACKET	1
21091-04	TURBULATOR SPRING	4
21093-01	FITTING	2
21096-00	THERMOSTAT	4
21308-40C	SCREW	1
21742-00	END CAP SPACER	2
21810-00	COVER SPACER	2
21819-00	LIVE WIRE DECAL	1
22019-00	HEATER ELEMENT	4
22027-00	END PLATE	1
22028-00	HEATER COVER	1
22060-01	SENSOR TUBE ASSEMBLY	2
22108-00	OVERTEMP SWITCH	4
7486-03	FLAT WASHER	2
7486-04	FLAT WASHER	2
7486-05	FLAT WASHER	4
7486-13	FLAT WASHER	1
7733-12	HEX NUT	2
7733-42	HEX NUT	1
7734-04	LOCK WASHER	2
7734-06	LOCK WASHER	5
7734-10	LOCK WASHER	1
7958-144C	SCREW	2
7958-20C	SCREW	2
8612-08	HOSE CLAMP	4
9944-40C	SCREW,SHDC,SS,.250-20X	1
9955-40C	SCREW,SHDC,CS,.500-13X	1

22023-01 High Pressure Hose Assembly

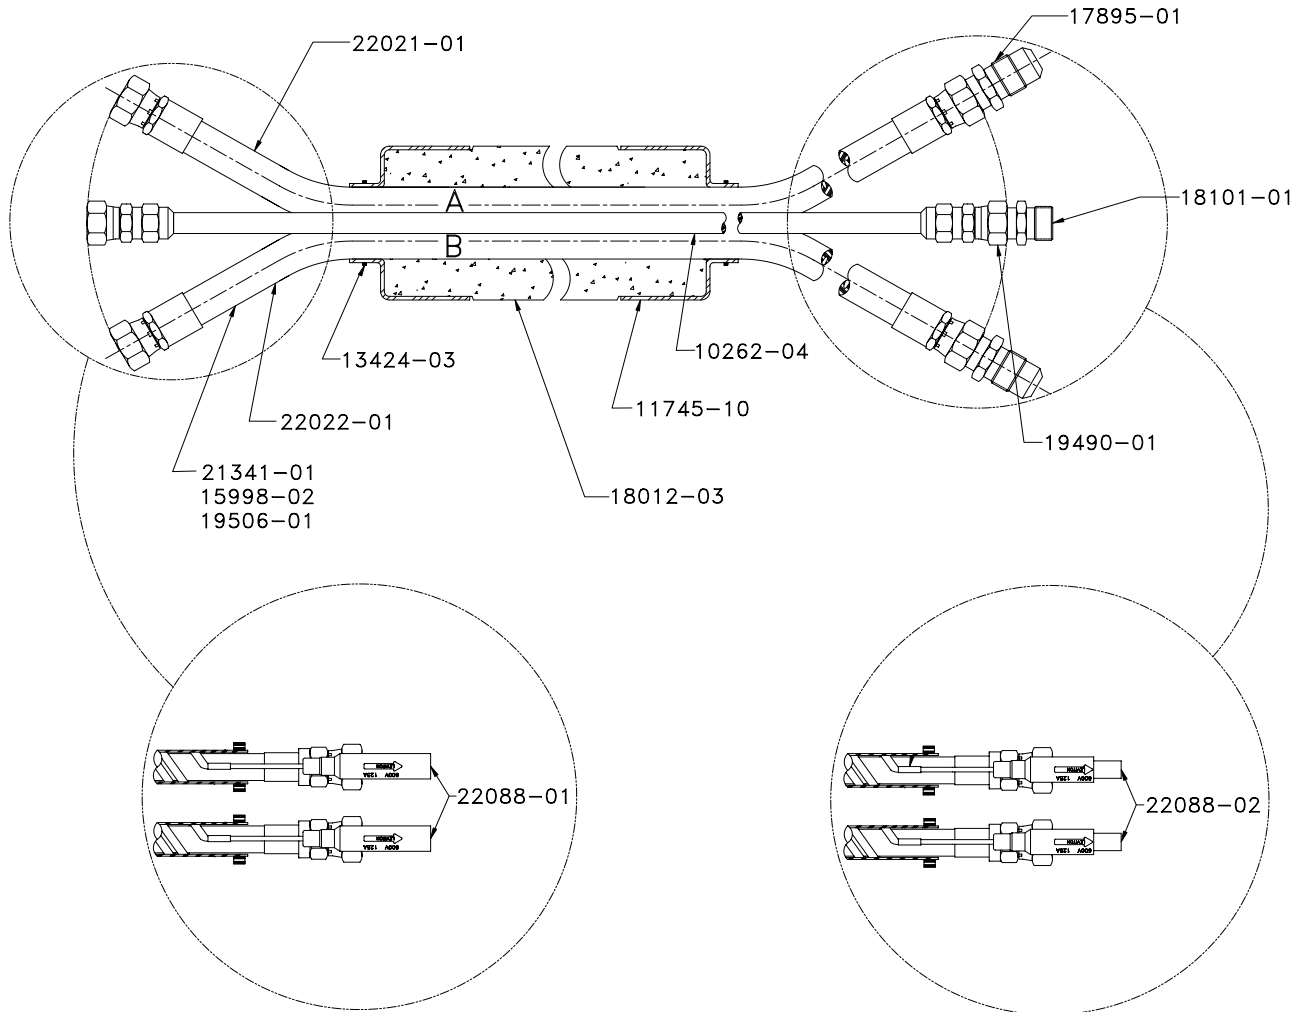


PART NUMBER	DESCRIPTION
10262-04	NYLON HOSE
11745-10	HEAT SHRINK TUBING
13424-03	CABLE TIE
15998-02	TUBING
17896-01	UNION FITTING
18012-03	HEATED HOSE COVER
18101-01	ADAPTER FITTING
19490-01	SWIVEL HOSE FITTING
19506-01	COPPER STRIP
21341-01	MATERIAL HOSE
22021-01	(ISO) HOSE ASSY.
22022-01	(POLY) HOSE ASSY.
22088-01	MALE ELECTRIC PLUG
22088-02	ELECTRIC PLUG ASSY.


Typical System Layout Diagram

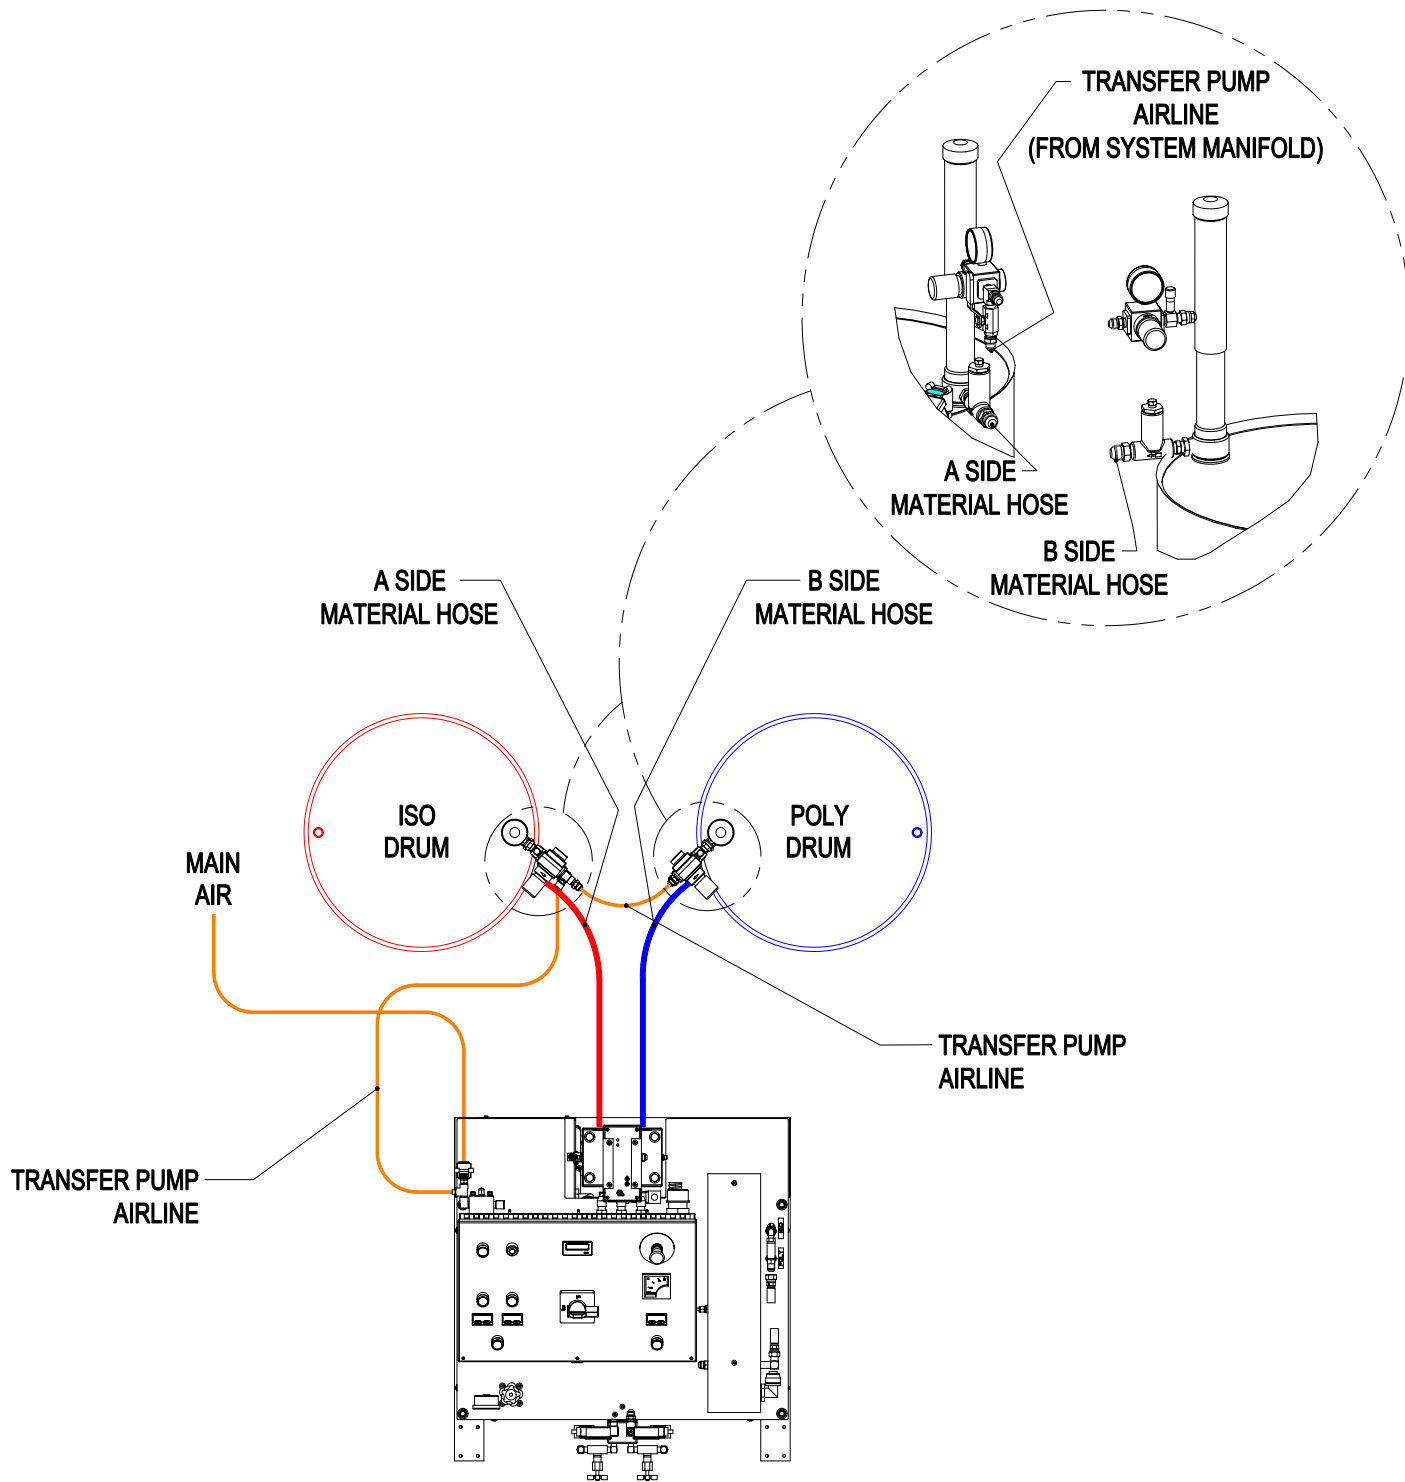

Typical System Hose Connection 50 Ft. Application

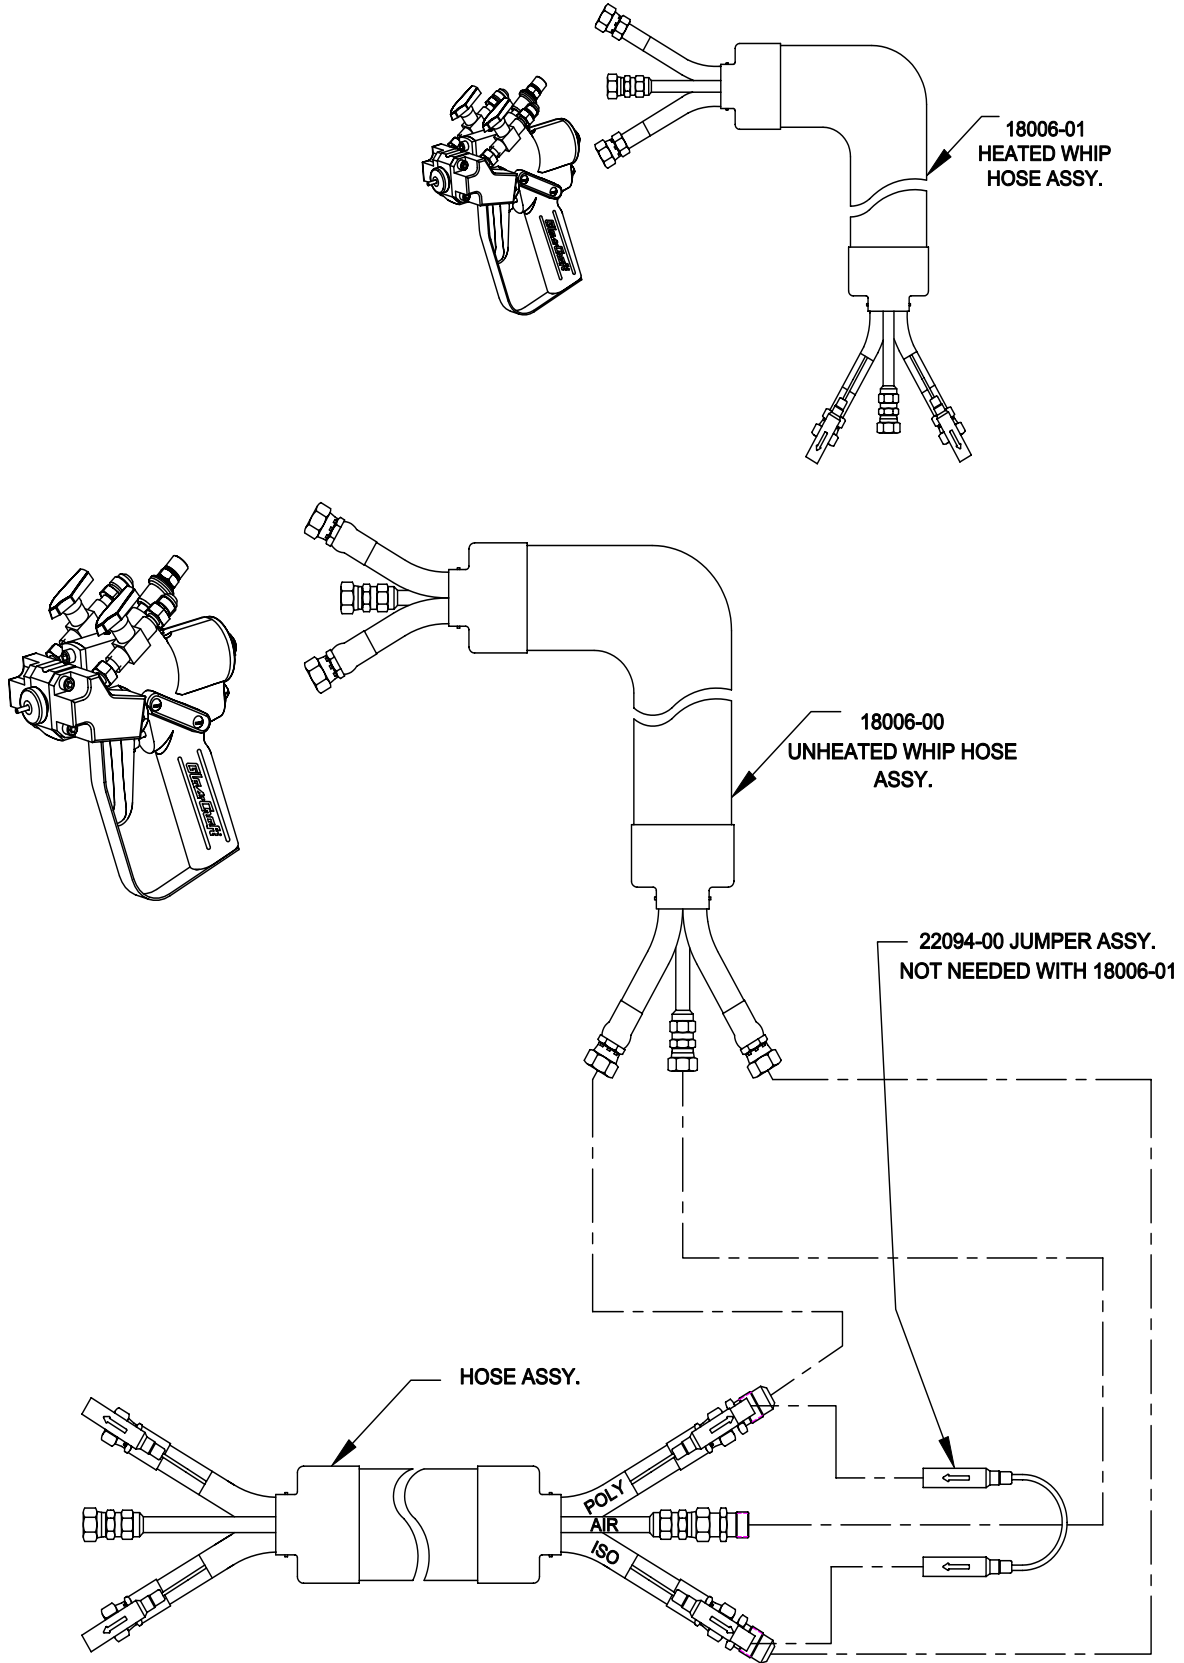

Typical System Hose Connection 100-300 Ft. Applications

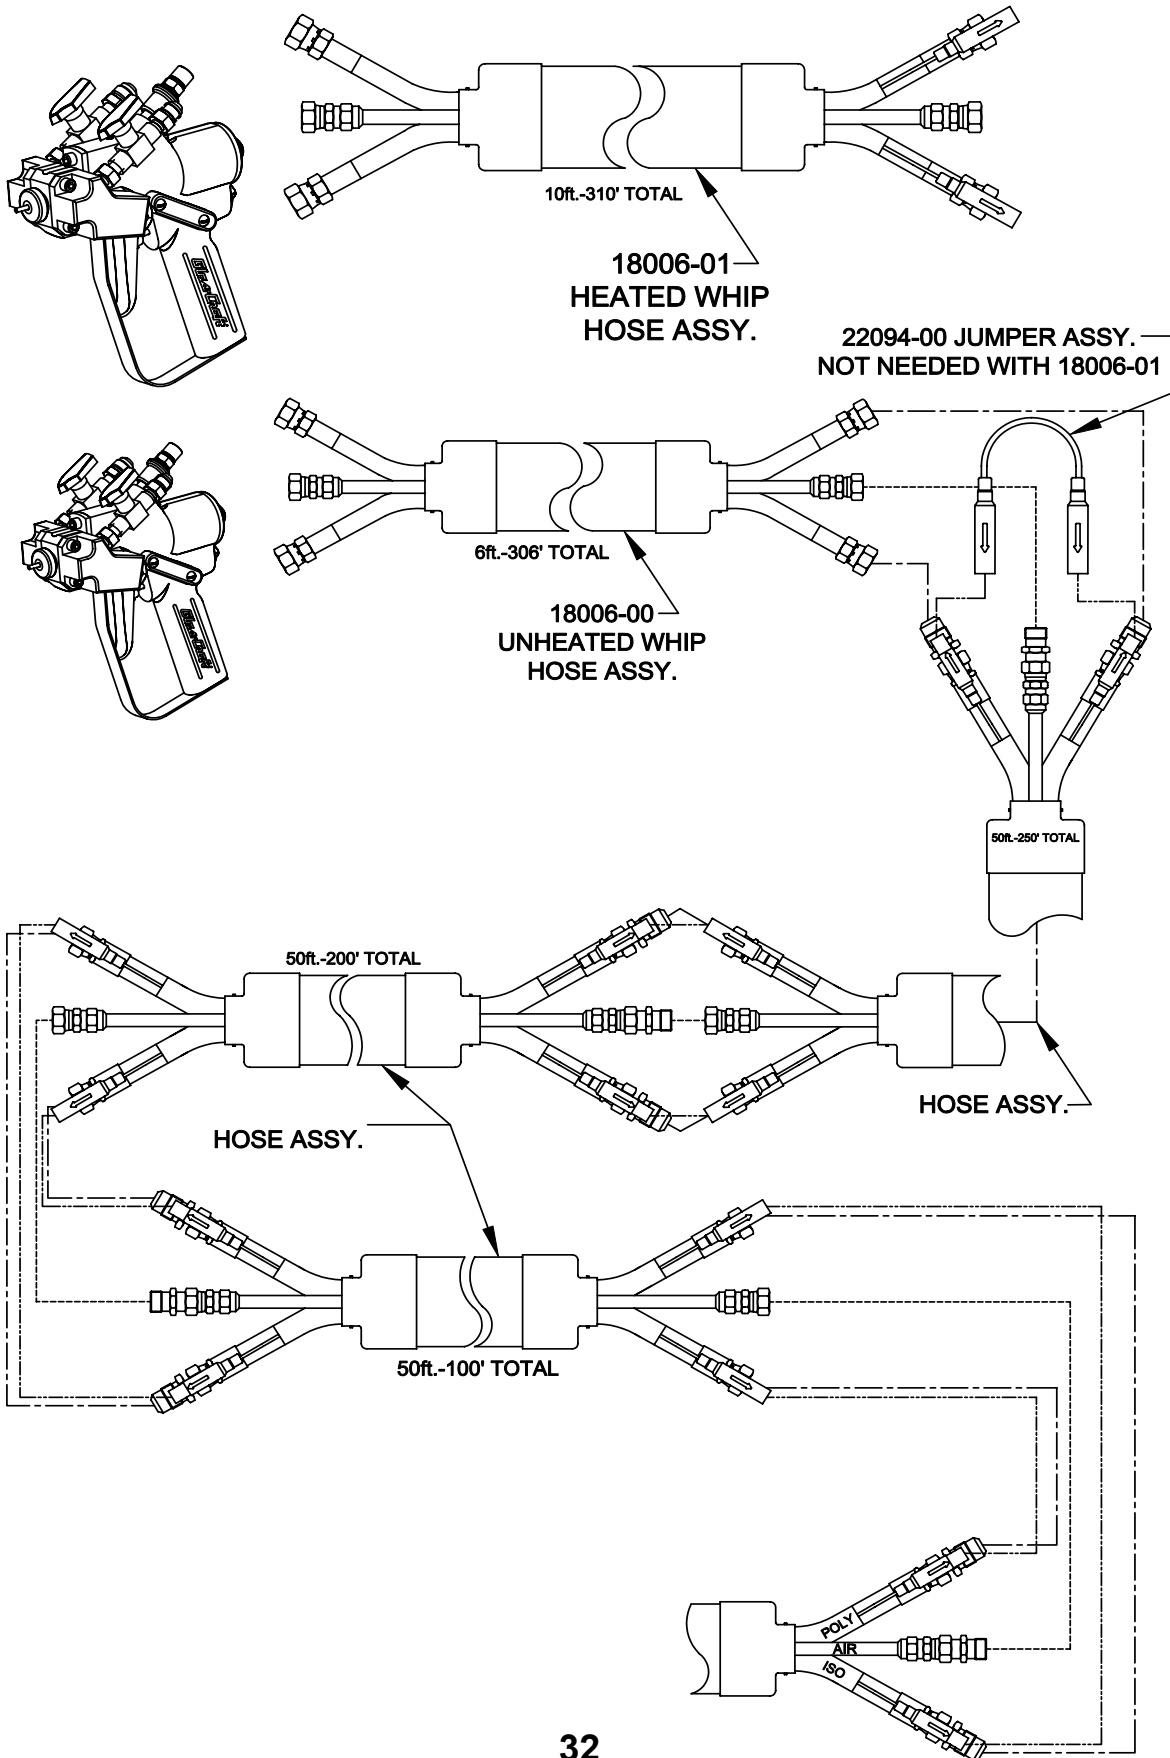

Safety

Safe Handling And Use Of Urethane Foam Equipment

Introduction

Any tool, if used improperly, can be dangerous. Safety is ultimately the responsibility of those using the tool. In like manner, safe operation of polyester processes is the responsibility of those who use such processes and those who operate the equipment. This manual outlines procedures to be followed in conducting polyester operations safely.

All personnel involved in dispensing operations should read and understand this manual. It is most important that equipment operators, maintenance, and supervisory personnel understand the requirements for safe operation.

This manual cannot answer every circumstance; each user should examine his own operation, develop his own safety program and be assured that his equipment operators follow correct procedures. GlasCraft hopes that this manual is helpful to the user and recommends that the precautions in this manual be included in any such program.

Urethane foam systems are comprised of several different chemical compounds, some of which may be hazardous if improperly used.

CAUTION

Particular caution must be taken with respect to the vapors released during the use of urethane foam systems.

Isocyanate compounds are used in urethane foaming operations. The medical history of persons who may be exposed to such isocyanates should be examined. It is recommended that individuals with a history of chronic respiratory ailments should avoid exposure to all isocyanates.

In addition to the manual, GlasCraft recommends that the user consult the regulations established under the Occupational Safety & Health Act (OSHA), particularly the following sections:

- 1910.94 Pertaining to ventilation.
- 1910.106 Pertaining to flammable liquids.
- 1910.107 Pertaining to spray finishing operations, particularly Paragraph (m)

Organic Peroxides and Dual Component Coatings. Local codes and authorities also have standards to be followed in the operation of your spraying equipment. Chemical manufacturer's recommendations should be obtained and considered. Your insurance carrier will be helpful in answering questions that arise in your development of safe procedures.

Personnel Safety Equipment

GlasCraft recommends the following Personal Safety Equipment for conducting safe operations of the Polyester Systems:



GlasCraft recommends that the user consult the state and local regulations established for all Safety equipment listed.

Operating Safely

In operating urethane foam equipment safely, user should make every effort to:

1. Handle chemicals safely.
2. Provide adequate ventilation.
3. Provide adequate safety equipment (gloves, respirators, safety glasses, protective clothing, etc.) for operators and all others working in areas where they may be exposed to the chemicals or their vapors.
4. Avoid operating equipment which has given any indication of malfunction.
5. Become fully acquainted with the equipment and chemicals used.

Handling Chemicals Safely

Storage of polyisocyanates, diamines, and organic solvents should be isolated and restricted to specially constructed storage rooms. Store chemicals in original containers and according to manufacturer's recommendations listed on the container. Maximum ambient temperatures to which such chemicals should be exposed are specified by the manufacturer and MUST NOT be exceeded either in the storage area or in the spraying or pouring area.

Safety

To avoid moisture contamination, do not open containers until ready for use. After use, the remaining material should be re-sealed in the original container and stored in areas away from moisture.

During clean-up of spilled isocyanate component, respirators, gloves and eye protection must be worn. Isocyanates which have been spilled can be controlled by covering them with dry sawdust and/or other absorbent, inert materials. Care should be taken to avoid skin contact. The absorbent material and the absorbed isocyanate should be collected promptly, placed in an open-top container, and treated with dilute solutions of ammonium hydroxide and/or alcohol. While being treated in this manner, the material should be in an adequately ventilated area. Clothing on which any material has been spilled should be removed immediately, and cleaned before being worn again.

Clean-Up Solvents

WARNING

A hazardous situation may be present in your pressurized fluid system!

Halogenated Hydrocarbon Solvents can cause an explosion when used with aluminum or galvanized components in a closed (pressurized) fluid system (pumps, heaters, filters, valves, spray guns, tanks, etc.).

The explosion could cause serious injury, death and/or substantial property damage.

Cleaning agents, coatings, paints, etc. may contain Halogenated Hydrocarbon Solvents.

Some GlasCraft spray equipment includes aluminum or galvanized components and will be affected by Halogenated Hydrocarbon Solvents.

There are three key elements to the Halogenated Hydrocarbon (HHC) solvent hazard.

1. **The presence of HHC solvents.** 1,1,1-Trichloroethane and Methylene Chloride are the most common of these solvents. However, other HHC solvents are suspect if used; either as part of paint or adhesives formulation, or for clean-up or flushing.
2. **Aluminum or Galvanized Parts.** Most handling equipment contains these elements. In contact with these metals, HHC solvents could generate a corrosive reaction of a catalytic nature.

3. **Equipment capable of withstanding pressure.** When HHC solvents contact aluminum or galvanized parts inside a closed container, such as a pump, spray gun, or fluid handling system, the chemical reaction can, over time, result in a build-up of heat and pressure, which can reach explosive proportions.

When all three elements are present, the result can be an extremely violent explosion. The reaction can be sustained with very little aluminum or galvanized metal: any amount of aluminum is too much.

The reaction is unpredictable. Prior use of an HHC solvent without incident (corrosion or explosion) does NOT mean that such use is safe. These solvents can be dangerous alone (as a clean-up or flushing agent) or when used as a component of a coating material. There is no known inhibitor that is effective under all circumstances. Furthermore, the mixing of HHC solvents with other materials or solvents, such as MEK, alcohol, and toluene, may render the inhibitors ineffective.

The use of reclaimed solvents is particularly hazardous. Reclaimers may not add any inhibitors, or may add incorrect amounts of inhibitors, or may add improper types of inhibitors. Also, the possible presence of water in reclaimed solvents could feed the reaction.

Anodized or other oxide coatings cannot be relied upon to prevent the explosive reaction. Such coatings can be worn, cracked, scratched, or too thin to prevent contact. There is no known way to make oxide coatings or to employ aluminum alloys, which will safely prevent the chemical reaction under all circumstances.

Several solvent suppliers have recently begun promoting HHC solvents for use in coating systems. The increasing use of HHC solvents is increasing the risk. Because of their exemption from many State Implementation Plans as Volatile Organic Compounds (VOC's), their low flammability hazard, and their not being classified as toxic or carcinogenic substances, HHC solvents are very desirable in many respects.

Safety

WARNING

If you are now using Halogenated Hydrocarbon solvents in pressurized fluid systems having aluminum or galvanized wetted parts,

IMMEDIATELY TAKE THE FOLLOWING STEPS:

- *Empty system, shut-off, completely depressurize in accordance with equipment service instructions.*
- *Remove equipment from service, disassemble in accordance with equipment servicing instructions.*
- *Inspect all parts for corrosion and/or wear. Replace any damaged parts.*
- *Thoroughly clean all parts of the equipment with a non-halogenated solvent and reassemble in accordance with equipment servicing instructions.*
- *Flush equipment with non-halogenated solvent.*
- *Do NOT reuse equipment with HHC solvents or with materials containing such solvents.*
- *Material suppliers and/or container labels should be consulted to ensure that the solvents used are compatible with your equipment.*

NOTE

GlasCraft is aware of NO stabilizers available to prevent Halogenated Hydrocarbon solvents from reaction under all conditions with aluminum components in a closed fluid system.

TAKE IMMEDIATE ACTION...

Halogenated Hydrocarbon solvents are dangerous when used with aluminum components in a closed fluid system.

Consult your material supplier to determine whether your solvent or coating contains Halogenated Hydrocarbon Solvents.

GlasCraft recommends that you contact your solvent supplier regarding the best non-flammable clean-up solvent with the heat toxicity for your application.

If, however, you find it necessary to use flammable solvents, they must be kept in approved, electrically grounded containers.

Bulk solvent should be stored in a well-ventilated, separate building, 50 feet away from your main plant.

You should allow only enough solvent for one day's use in your laminating area.

"NO SMOKING" signs must be posted and observed in all areas of storage or where solvents and other flammable materials are used.

Adequate ventilation (as covered in OSHA Section 1910.94 and NFPA No. 91) is important wherever solvents are stored or used, to minimize, confine and exhaust the solvent vapors.

Solvents should be handled in accordance with OSHA Section 1910.106 and 1910.107.

Toxicity of Chemicals

GlasCraft recommends that you consult OSHA Sections 1910.94, 1910.106, 1910.107 and NFPA No. 33, Chapter 14, and NFPA No. 91.

Contact your chemical supplier(s) and determine the toxicity of the various chemicals used, as well as the best methods to prevent injury, irritation and danger to personnel.

Also determine the best methods of first aid treatment for each chemical used in your plan

First Aid

If chemicals containing isocyanate are splashed on the skin, they can produce ill effects. Steps to counteract such effects should be started immediately.

Apply Tincture of Green Soap, full strength, to the contaminated area. If Tincture of Green Soap is not immediately available, wash the exposed area repeatedly with soap and water. Soap and water is not as desirable as using Tincture of Green Soap because many isocyanate components are not easily dissolved in water. In addition, soap and water does not form a barrier to the isocyanate.

After approximately two to four minutes, wash off the Tincture of Green Soap with water. If there is still an indication of isocyanate present, repeat the application. If the isocyanate contamination is on the facial area, care must be taken to avoid getting the Tincture of Green Soap in the eyes.

If the person develops breathing difficulties, oxygen should be administered. Quite often the exposed person will experience residual effects such as coughing spells. **CONTACT PHYSICIAN IMMEDIATELY.**

WARNING

Contact a doctor immediately in the event of an injury and give him the information you have collected. If your information includes first aid instructions, administer first aid immediately while you are contacting the doctor.

Safety

If a person accidentally swallows isocyanate, large amounts of water should be swallowed immediately. Vomiting should then be induced by patient sticking his finger down his throat, or by swallowing large quantities of warm salt water or warm soapy water. After vomiting, more water should be taken to dilute isocyanate further. CONTACT PHYSICIAN IMMEDIATELY.

Ventilation

WARNING

Hazardous concentrations of some chemical vapors exist before they can be smelled. Chemical component suppliers should be contacted to determine at what concentrations the vapors of the chemicals they supply become dangerous, and the procedures and equipment needed to detect such dangerous concentrations. Such equipment should be obtained.

Adequate ventilation must be provided in any area where foam chemicals are sprayed or poured, and wherever the material containers are opened.

In industrial applications, foaming operations should be restricted to specific areas, and proper ventilation should be provided in these areas to prevent chemical vapors from spreading. Spray foaming operations MUST be restricted to a spray booth where a minimum exhaust of 100 feet per minute at the face of the booth is provided. Special care should be taken to prevent unsuspecting personnel both inside and outside of the plant from being exposed to chemical vapors. The chemical vapors should be exhausted to atmosphere in such a manner and at a sufficiently low concentration that personnel outside the plant are not exposed to dangerous concentrations of chemical vapors. Refer to OSHA Standards, sub-part G, 1910.107 and particularly sub-section (m) for Federal standards. State and local authorities may have applicable statutes or regulations concerning ventilation.

In contractor applications (for example, at a construction site, inside building or other enclosed space), the forced ventilation normally provided is likely to be inadequate. These applications, therefore, usually REQUIRE the use of forced, fresh air respirators for all persons in the areas where foaming operations are conducted or where the chemical vapors are likely to spread.

In industrial and contractor applications, it is advisable to run frequent tests to determine the exact concentration of isocyanate vapor in the air. Industrial equipment is available for making such determinations. Your chemical supplier can recommend such equipment and procedures.

Proper Safety Equipment

All persons spraying or working in areas where forced air ventilation is not adequate to remove isocyanate vapors from the air MUST use an approved (U.S. Bureau of Mines) fresh air supplied respirator.

Respirators should be regularly inspected, cleaned and disinfected according to good practices. Records must be kept of the inspections. The user MUST have a medical clearance indicating that he can safely use a respirator.

Respirators must fit securely; beards prevent a tight seal around the face. Eye glasses have to be given special attention and contact lenses are prohibited.

Safety goggles, gloves and other protective devices are suggested for operators of foaming equipment. Refer to OSHA Standards, sub-part 1, 1910.132, 1910.133 and 1910.134 for Federal standards.

IF YOU HAVE ANY QUESTIONS REGARDING THE ABOVE PRECAUTIONS OR ANY SERVICE OR OPERATION PROCEDURES, CALL YOUR GLASCRAFT DISTRIBUTOR OR GLASCRAFT, INC.

NOTICE

All statements, information and data given herein are believed to be accurate and reliable but are presented without guaranty, warranty or responsibility of any kind expressed or implied. The user should not assume that all safety measures are indicated or that other measures are not required.

GlasCraft
DISPENSING EXCELLENCE

5845 WEST 82nd STREET, SUITE 102
INDIANAPOLIS, INDIANA 46278 U.S.A.

PHONE (317) 875-5592

FAX (317) 875-5456

Installation

Assembly Instructions

NOTE

GlasCraft Systems are factory assembled. If any questions arise concerning air or electrical connections, please refer to illustrations located in the forward portion of this User Manual or contact your GlasCraft distributor.

Fluid Line Connection

The material hoses that bring Isocyanate and Polyol chemicals and the air from the machine to the gun should be connected as follows.

Required Tools:

Opened - end wrenches - 5/8, 3/4, 13/16



1. Lay hoses out straight.
2. Couple hoses together with supplied union fittings and tighten finger-tight.
3. a. Hold crimp fitting hex (3/4 in.), and union fitting together, allowing the hose to hold it's natural line.
b. Using the appropriate wrench (A-side 3/4 in. / B-side 13/16 in.) tighten swivel fitting to union, not allowing crimp fitting or union to turn. Repeat on opposite side of union.

This practice is required on all connection points.


- 1) **Hose @ machine**
- 2) **Hose @ gun**
- 3) **Adding additional hose sections**

4. Plug hoses together, The TRU-FLOW hose plugs are a twist-lock design.
 - a. Push plugs together.
 - b. Twist to lock position.

Once connections are made, tape connections well enough to keep plugs from coming undone, damaged, etc.

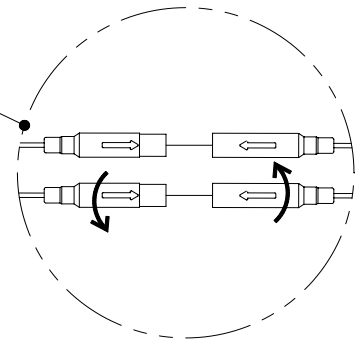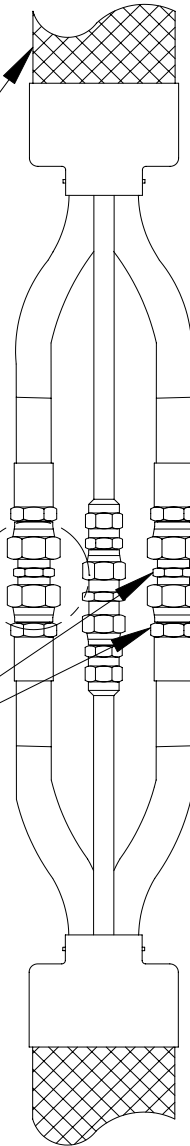

Installation

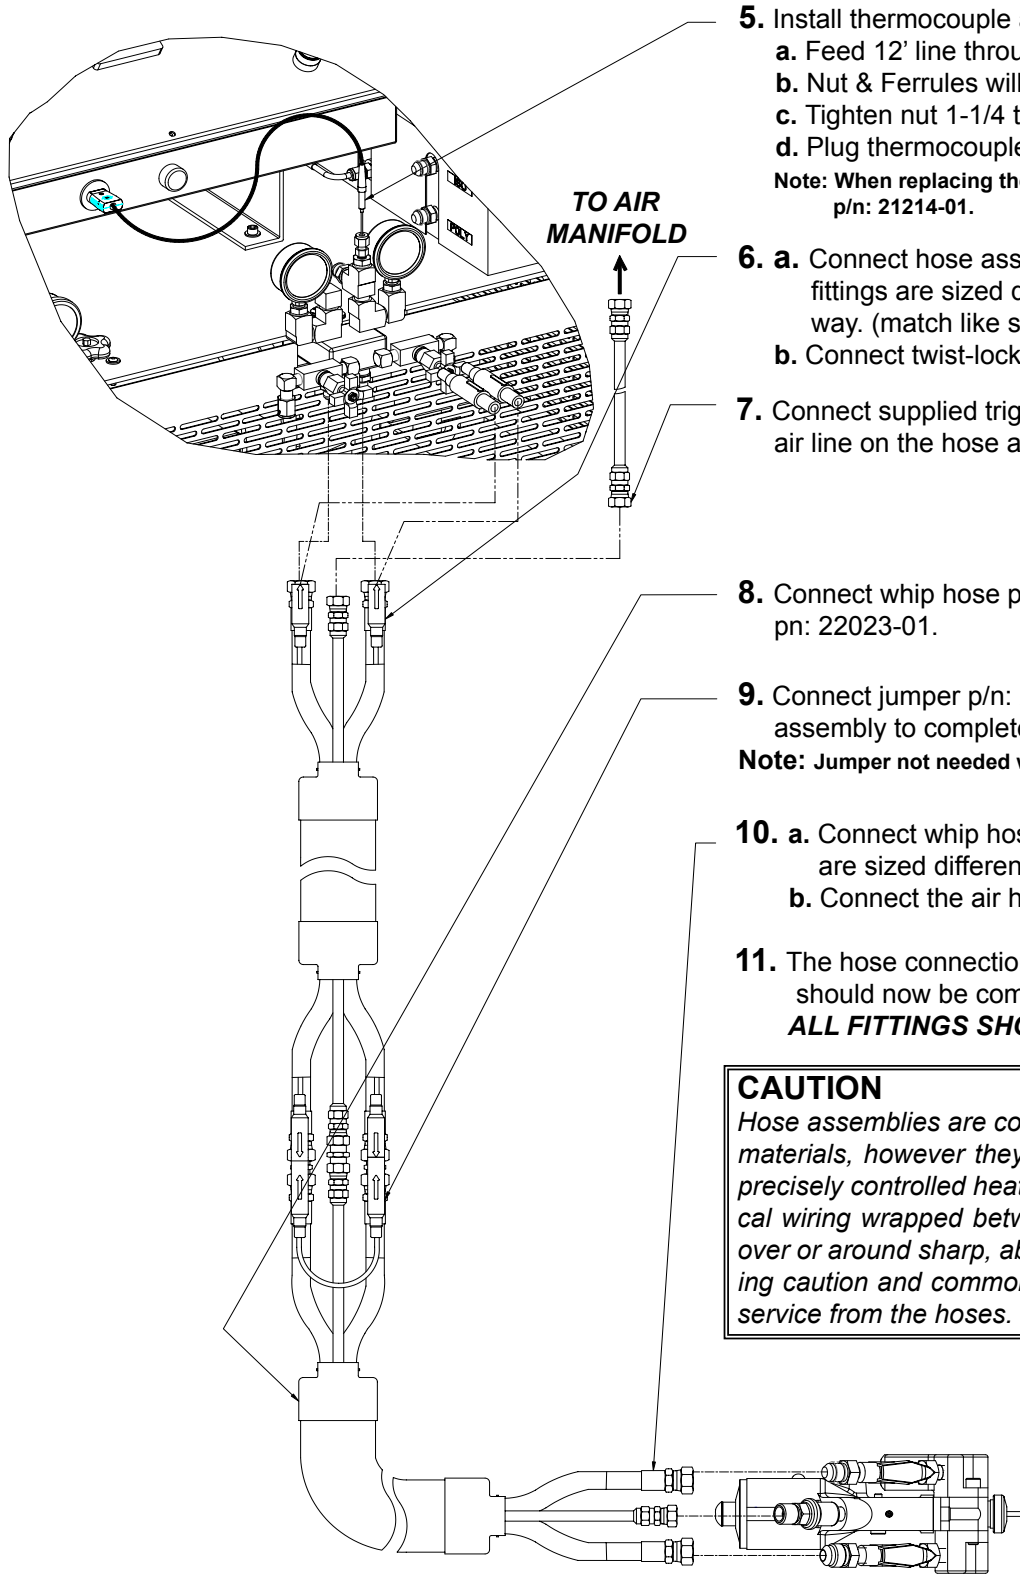

5. Install thermocouple at tee fitting.
 - a. Feed 12' line through hose.
 - b. Nut & Ferrules will lock into fitting.
 - c. Tighten nut 1-1/4 turns past finger tight.
 - d. Plug thermocouple into control box.

Note: When replacing thermocouple p/n 22074-00 use kit p/n: 21214-01.
6.
 - a. Connect hose assembly to the front of the unit. The fittings are sized differently and will attach only one way. (match like sized fittings).
 - b. Connect twist-lock plugs. (see hose installation)
7. Connect supplied trigger air line to the air line on the hose assembly.
8. Connect whip hose p/n: 18006-00 to hose assembly, pn: 22023-01.
9. Connect jumper p/n: 22094-00 to plugs on hose assembly to complete circuit.

Note: Jumper not needed with 18006-01 heated whip hose.
10.
 - a. Connect whip hose assembly to gun. The fittings are sized differently and will attach only one way.
 - b. Connect the air hose to gun.
11. The hose connections between the unit and gun should now be complete.


ALL FITTINGS SHOULD NOW BE TIGHT

CAUTION
Hose assemblies are constructed of durable, rugged materials, however they are not indestructible. To provide precisely controlled heated material, the hoses have electrical wiring wrapped between layers. Avoid dragging hoses over or around sharp, abrasive edges and corners. Exercising caution and common sense will give long, and reliable service from the hoses.

Installation

Optional Transfer Pump Installation

P/n: 17666-01

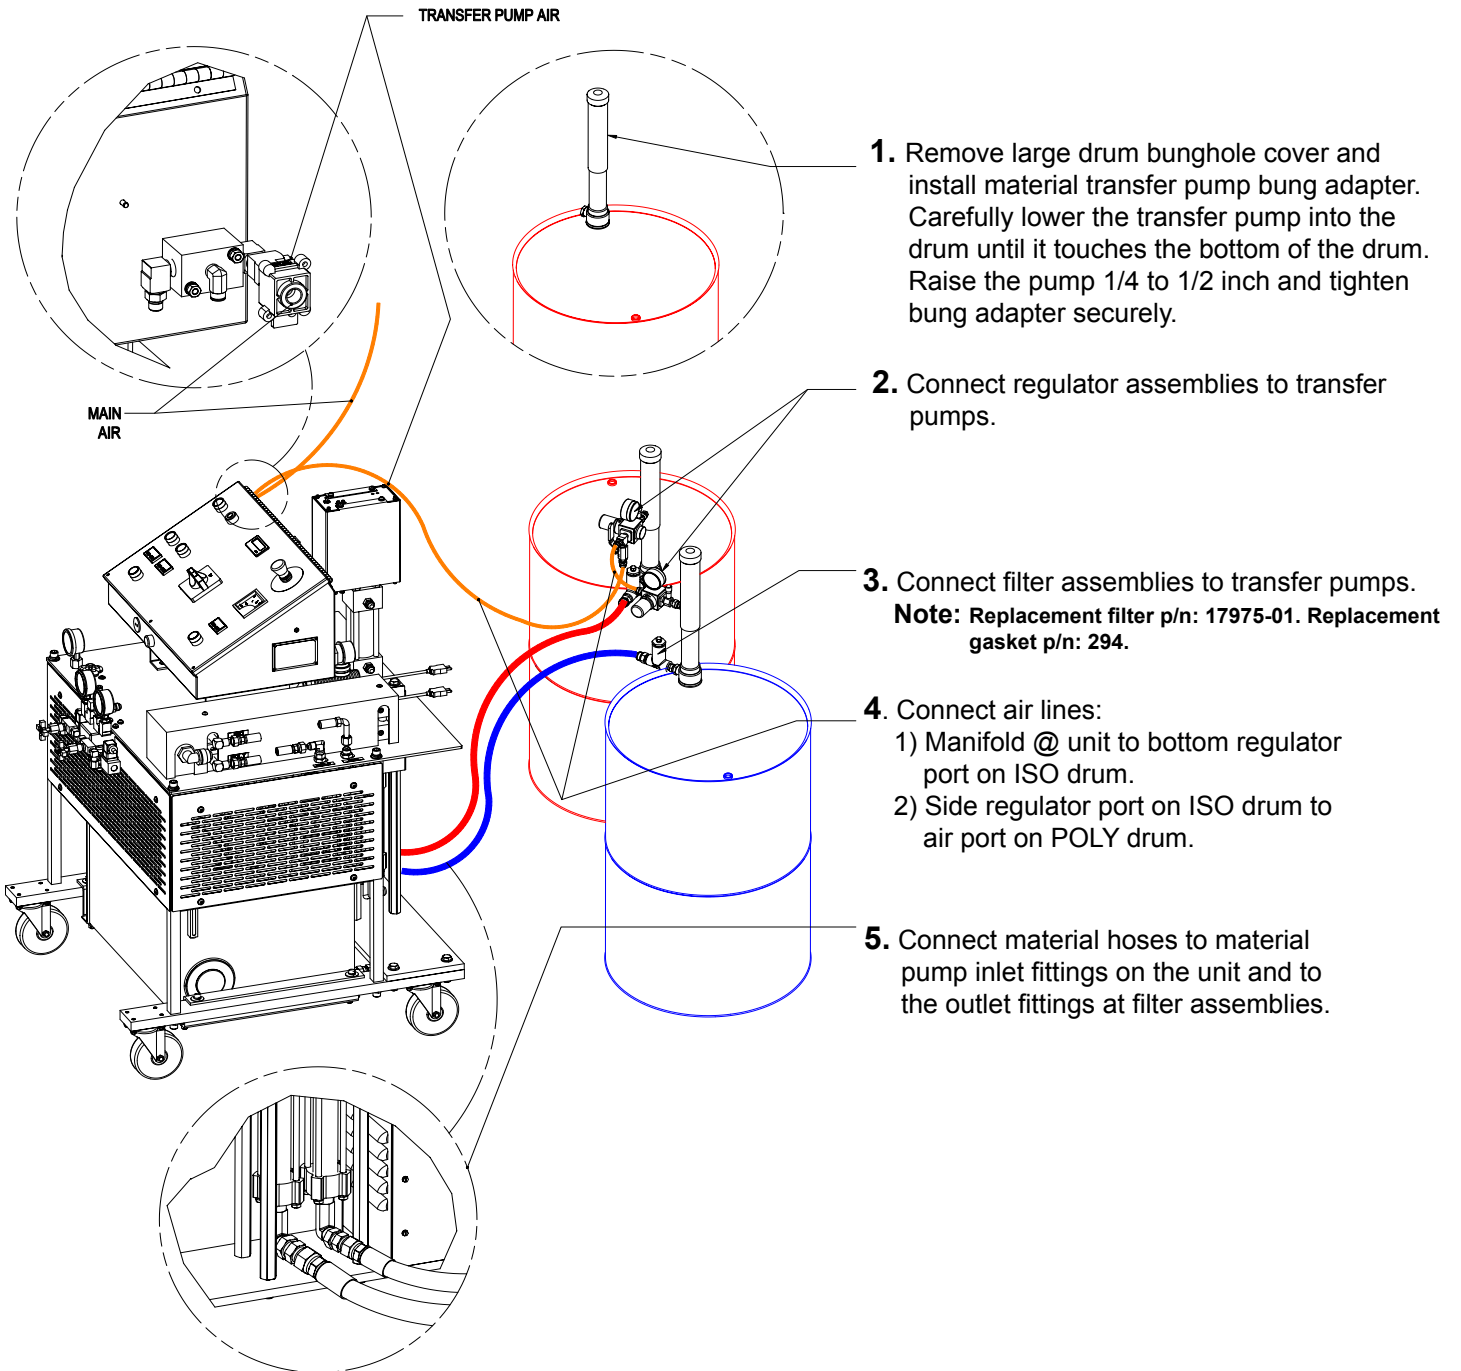

Optional Air Dryer Kit

P/n: 23410-00 should be installed on the ISO material drum. Replacement cartridge pn: 23409-00.

Installation

Electrical Connections

NOTE


Electrical connections must be checked on a periodic basis.

1. 200/208 volt single phase
L1 L2 GROUND
If the rotation is not correct, switch any two lead wires.

2. 200/240 volt three phase
L1 L2 L3 GROUND
If the rotation is not correct, switch any two lead wires.

3. 380 volt three phase
L1 L2 L3 N GROUND
If the rotation is not correct, switch any two lead wires.

4. The transformer can now be set for proper hose length.

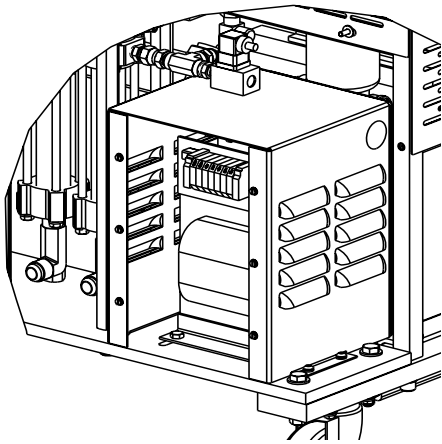



TRANSFORMER		
H1	PRIMARY	H2
COM	15V 30V 45V 60V 75V	TO HOSE
CONNECTIONS	HOSE LENGTH	
15V	50 FT	
30V	100 FT	
COM	45V	
(DO NOT MOVE)	60V	
60V	200 FT	
75V	250 FT	
75V	300 FT	

Hydraulic Power Pack

The hydraulic pack tank is empty when shipped from GlasCraft. The tank **MUST** be filled before operation.

Tank Capacity: 20 GAL. / 75.5 Liter

Recommended Hydraulic Fluid: ISO grade 32, 46, or 68. Fluids containing anti-wear additives are recommended for optimum service life.

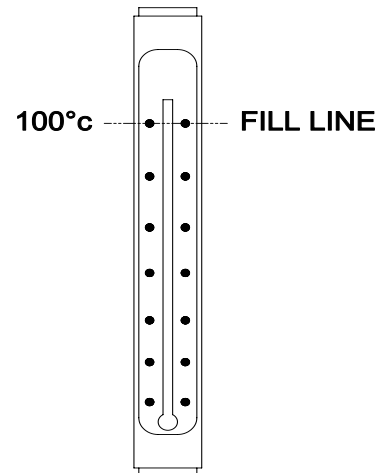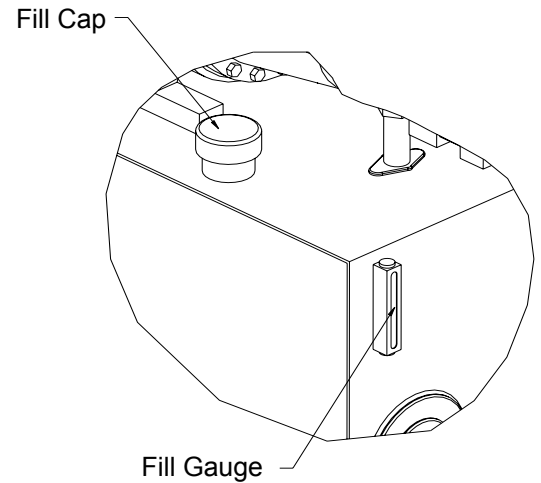

Operation

WARNING

Never leave machine unattended while system power is on or system is running.

System running is defined as: preheat cycle of the hose heat, primary heaters, or any pump operation.

Machine operators must be familiar with the component functions and operation of the machine.

Pre-Operation Check List

- A. Check that all fittings are securely tight.
- B. Check electrical hook-up (qualified electrician recommended).
- C. Main power switch on Control Box should be switched to OFF position.

WARNING

Do not place any part of the body in the path of the material spray.

Do not point the gun at or near other personnel.

Do not look into the Mixing Chamber orifice at any time.


Because of the hazardous materials used in this equipment, it is recommended that the operator use an air mask, goggles, protective clothing, and other safety equipment as prescribed by current regulations, recommendations of the chemical suppliers, and the laws in the area where the equipment is being used.

Initial Start-Up Procedure

With all material and air lines connected and power cable attached, the system is now ready for start-up.


Filling The System

1. The system is now ready to be filled with material. With transfer pumps in place, adjust regulators on transfer pumps to 30-50 psi or until the pumps begin cycling, once the pumps begin loading up (cycle rate slows or stops) increase transfer pump air pressure to 100 psi. to fill the system.

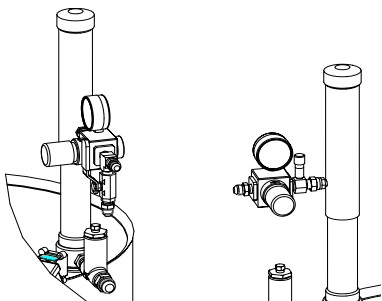


If the transfer pumps can not move material adequately enough to properly prime the system it may be necessary to start the hydraulic power pack.


- a. Ensure hydraulic pressure knob is turned completely **counter clockwise**.

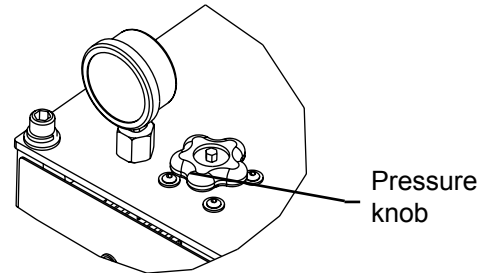


- b. Main air should be on to system manifold.

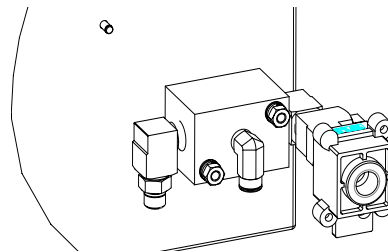

- c. Turn on hydraulic power pack.

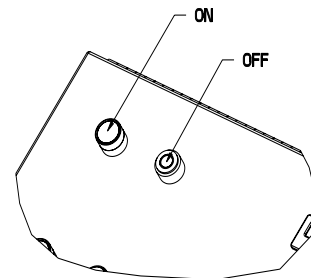


- d. Flip retract switch to "run" position.

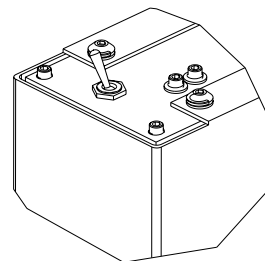

The pumps will begin cycling to completely prime the system


Operation

2. Remove ISO & POLY side blocks from gun.
MAKE SURE VALVES ARE OFF!

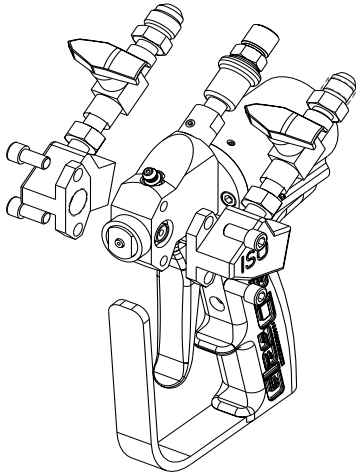

PROBLER P2

3. Place separate clean containers under each individual side block. Slowly open material valves (black arrow forward) on each side block to allow trapped air to escape the hose and material to flow into the containers until all air is purged from the material system.

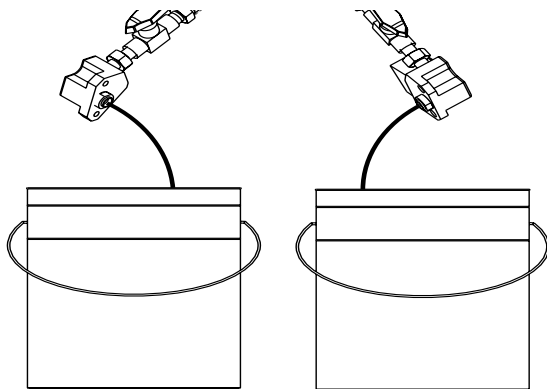

NOTE


Remember to dispense one to two gallons of material to clear the system of grease and plasticizer that was used during factory testing.

4. Close manual material valves. Material pressure gauges should now register approximately equal pressure.
5. Dispose of waste material properly and in accordance with chemical suppliers instructions and local, state and federal regulations.

NOTE


Before re-assembling Side Blocks, lubrication can be applied by dabbing a white lithium grease into holes inside of Gun Front Housing and wiping grease over Side-Block Seals. Grease will purge itself when air valve is turned on at Gun and Gun is triggered.

6. Clean and lubricate Side Blocks and Seals thoroughly and re-assemble on Gun. Make certain that Side Block Screws are tighten securely.
7. Refer to material manufacturers operating instructions for proper preparation of material, i.e, mixers, etc.
8. Turn main power Switch to ON position.

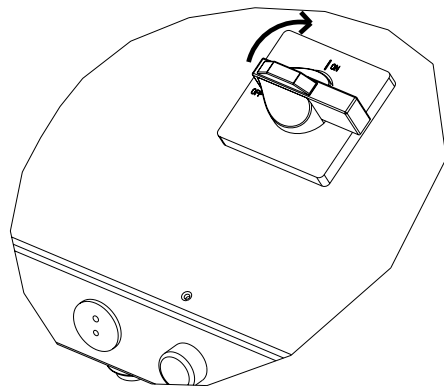


Operation

9. Turn on hose control:
- Push in the green button.
 - Press either up or down arrow buttons on the controller until desired temperature setting is achieved.

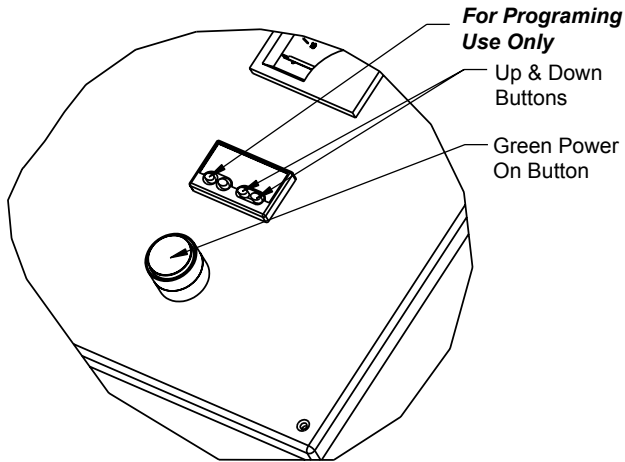

10. Turn on the ISO & POLY Heaters.

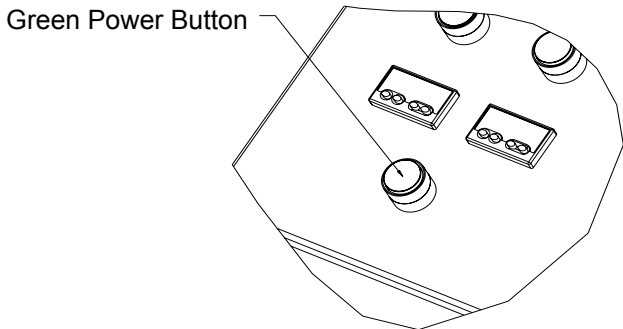


NOTE

Turn transfer pump air regulator on slowly. Pumps should cycle slowly until hoses are full of material.

WARNING

Straighten hose out flat, to avoid uneven heating and damage to internal wiring of the hose assembly.

11. Turn on Hydraulic Power Pack

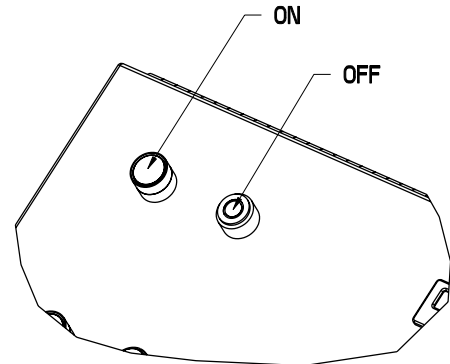

NOTE

Allow enough time for hose to warm up (approximately 30 minutes). Remember that the heated hose does not have a delta rating. The heated hose's function is to maintain the heat generated by the primary heaters during system operation, and preheat material during initial start-up. The hose should be set to maintain a temperature close to the set point of the primary heaters.

NOTE


To see the actual temperature of the liquid in the hose, push the blue button once and release. The actual temperature will then be displayed for 10 seconds.

12. Adjust temperature to desired setting. ISO and POLY controllers function exactly the same as the hose controller.

NOTE


Allow enough time for the material to be heated (approximately 3-5 minutes).

13. Slowly adjust Hydraulic PRESSURE KNOB **clockwise** on the system to desired pressure.

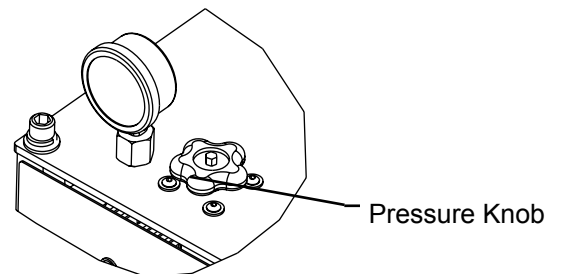

Operation


14. Turn purge air and material valves ON at the gun.

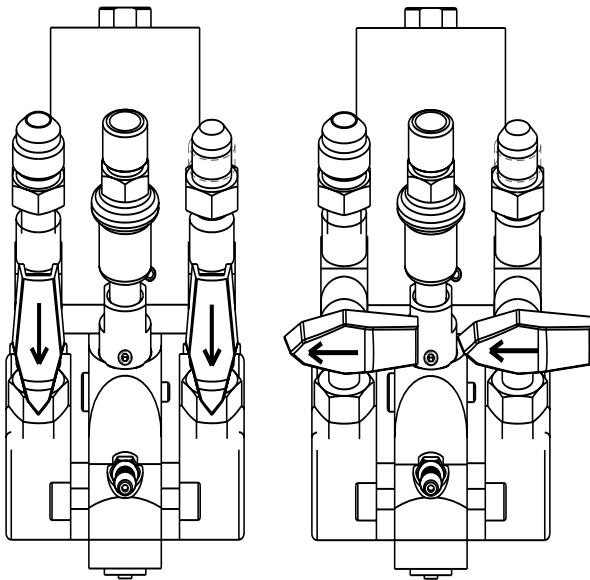

ON

OFF

15. If one side registers considerably more pressure than the other side, go to the high pressure side and bleed off some pressure by slightly opening the manual material valve on the side block over the container. Bleed pressure until both sides are approximately the same pressure.

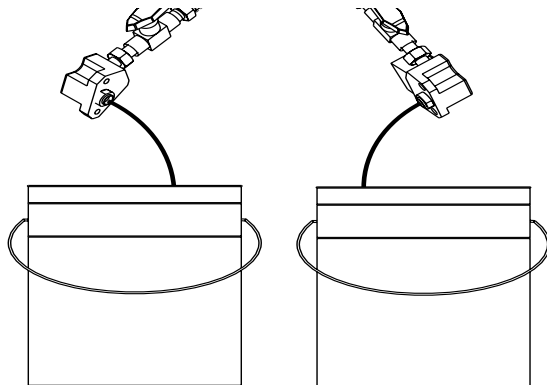

WARNING

Material will dispense at high pressure. follow all safety precautions

16. Relieve any excess pressure by triggering the gun.

NOTE

The Emergency Stop Switch is located on the top right side of the Box Panel, when depressed, it will shut down the power to the system. To reset, turn the "red" push button.

17. The system is now ready for operation.

Over Pressure System Protection

The system incorporates monitors for high pressure monitoring. These monitoring devices will prevent the system from continued operation if high pressure situations develop.

There are pressure sensors located on each side of the hose mounting block. The high pressure sensor is located at the outboard of the fluid section.


The high pressure monitoring sensor will engage if fluid pressure increases above 3200 psi.

If a high pressure situation develops, the sensor will detect this and immediately engage the hold-in circuit.

This will disengage power to the machine and it will stop cycling. It will also turn the heater off.

On the control box panel, there are two yellow lighted push buttons marked over pressure. One of these push buttons will be illuminated after the monitoring sensor engages, indicating where the problem is located (ISO or Poly).

Over Pressure Resets

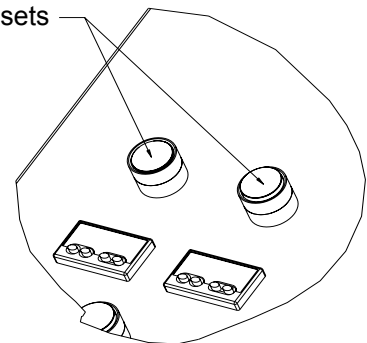

Operation

In an over pressure situation, the system will remain shut down until it is manually reset.

At this point, it is necessary to determine if the problem is an over pressure situation.

When the sensor engages, the system will be frozen, giving you the pressure readings at the time the problem was detected.

Inspect the fluid pressure gauges, in an over pressure situation, one of the fluid pressure gauges will be significantly higher than the other gauge.

WARNING

When main power to unit is on, the console will have wires that are live. Disconnect or turn off main power source before opening console to make any repairs.

WARNING

Before performing any repairs on the system, ALL AIR and FLUID PRESSURES SHOULD BE RELIEVED TO ZERO (BLEED-OFF)!

CAUTION

If you do not understand the electrical hook-up described above, consult your local GlasCraft distributor OR a qualified electrician.

It is recommended that a qualified, licensed electrician should install power to the supply disconnect.

You should always follow all local or national electrical codes.

CAUTION

Disconnect power source BEFORE attempting any repairs or opening the Control Boxes. Access to internal parts is limited to qualified personnel ONLY!

Place Main Power Breaker in OFF position BEFORE disconnecting power cables. This equipment is not approved for use in hazardous locations as set forth in the National Electrical Code Article 500 and Sub-Part "S" of the OSHA Standards.

Over Pressure Problem Correction

1. Determine if the problem is high pressure related.
2. Relieve system hydraulic pressure.
3. Turn off main power
4. Fix the problem area:
 - a. Potential high pressure causes:
 - Restriction
 - Overheating material in static position
 - ISO filter at gun
5. Re-start system for operation
6. Once the power has been turned off and problem solved, and the main power is turned on again, the over pressure lighted buttons will automatically be reset.

NOTE: For additional diagnostics refer to trouble shooting guide GC-1380

Fluid Sections

The wiper/lubrication cup at the top of each fluid section is designed to keep piston shaft clean and lubricate throat seal.

This special design requires very little maintenance.


Each week:

1. Wipe any residue from the mouth of the lubrication cup.
2. Add 1 teaspoon of a suitable lubricating solution.

Operation


System Shut-Down

1. Flip “retract” switch from “run” position.

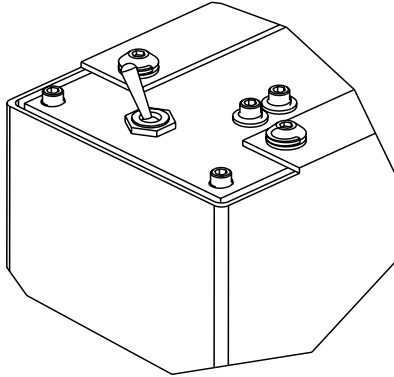


2. Trigger gun to send pumps into full downstroke.


3. Turn off hydraulic power pack.

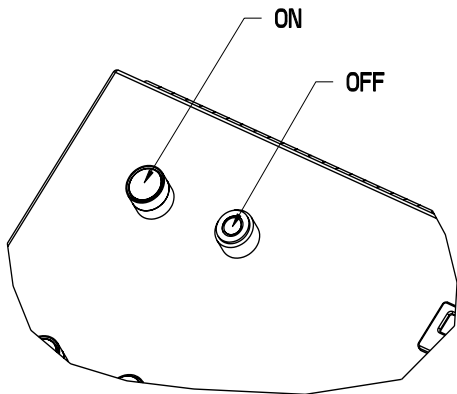

4. Turn off primary heaters.

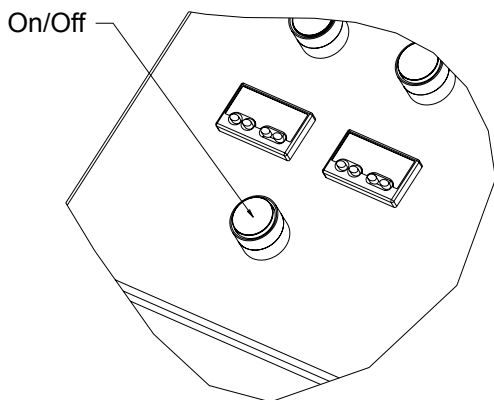

5. Turn main power switch off.

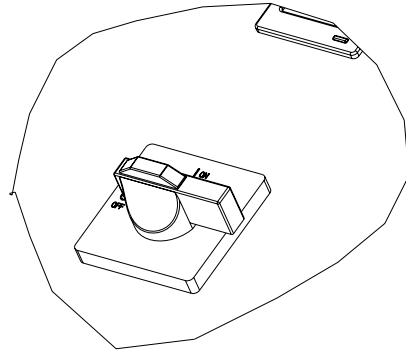

6. Refer to gun manual for proper Gun maintenance.

7. Reduce Hydraulic Pressure Knob setting to ZERO.

8. Visually inspect entire system for leaks.

9. Turn OFF System.

CAUTION

Do not bleed fluid pressure from the system.

Storing The Hose


Coil the hose with a minimum diameter of 4', To avoid kinking and subsequent damage to the internal wiring of the hose assembly.

Operation


System Daily Start-Up

1. Uncoil hose.
2. Check desiccant dryer beads to insure they are still purple and have not changed to pink.
3. Check and lube top of the fluid section.


Wipe off residual material and add a tablespoon of DOP or material suppliers recommended lubricant.

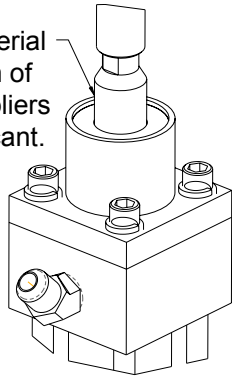


4. Check material screens at the gun and transfer pumps.
5. Start the drum mixer and it run to material suppliers specifications. (20-30 minutes)
6. Turn on the hose controller and set the temperature according to material suppliers specifications.

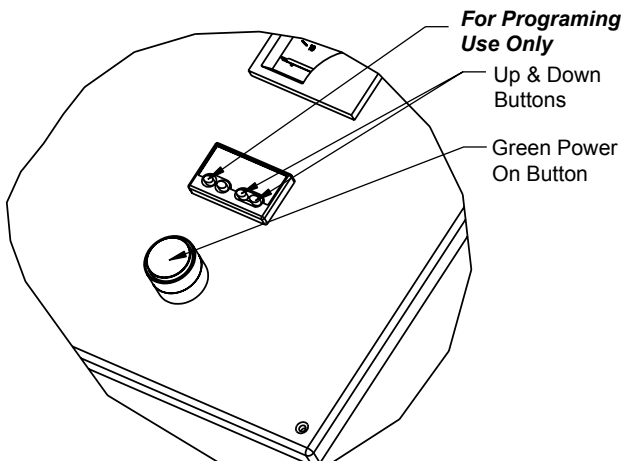


7. Once the hose temperature reaches desired set point, It's ok to turn on the primary heaters and set temperature to material suppliers specifications.

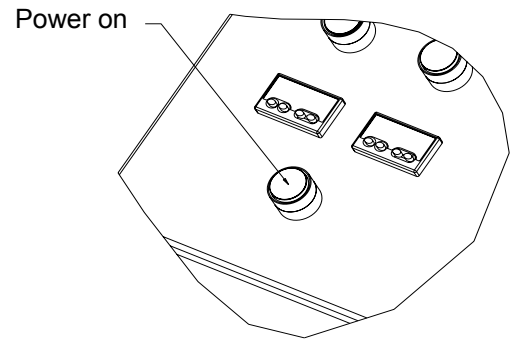

8. Depress yellow slide valve to open main air to gun and transfer pumps.

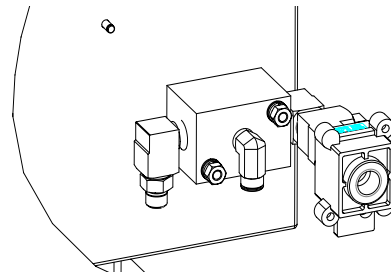


9. Flip retract switch to "run"

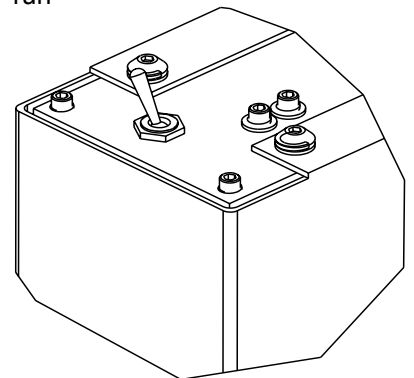

Operation

System Daily Start-Up

10. Increase Hydraulic pressure to desired pressure.

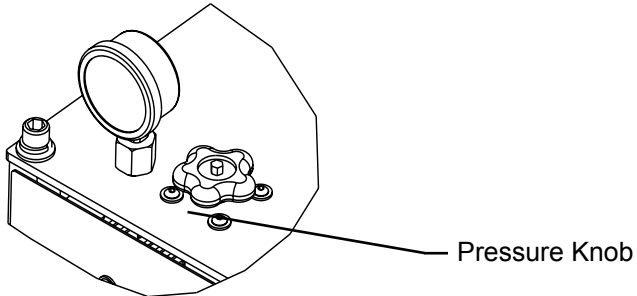

11. Perform Probler / Probler P2 side block seal integrity test.

12. Perform Probler / Probler P2 high-pressure ball valve test.

13. **READY TO SPRAY!**

Limited Warranty Policy

GLASCRAFT, INC. ("GlasCraft") warrants to the original Purchaser of GlasCraft manufactured equipment and parts, that all GlasCraft manufactured equipment and parts will conform to their published written specifications and be free of defects in workmanship and material for a period of one (1) year from the original date of installation. GlasCraft makes no warranty to anyone other than the original Purchaser.

If any GlasCraft manufactured part or equipment is found to be defective in workmanship or material within the one-year period from the date of installation, as determined solely by GlasCraft, GlasCraft, in its sole discretion, will either repair or replace the defective part or equipment at GlasCraft's cost, including freight charges both ways, or credit or refund the purchase price for the defective equipment or part.

A warranty claim will be honored only when:

1. GlasCraft has been informed, in writing, of any such defect in workmanship or material within ten (10) days after discovery by the original Purchaser;
2. An official of GlasCraft has issued a return authorization number; and
3. The claimed defective equipment or part has been returned to GlasCraft by the original Purchaser, freight prepaid (with proper return authorization number(s) attached), to: GlasCraft, Inc., 5845 West 82nd Street, Suite 102, Indianapolis, IN 46278, U.S.A.

This warranty shall not apply to any equipment or parts that have been altered or repaired by anyone other than GlasCraft or to defects or damage resulting from improper installation, misuse, negligence, accident, or use not specified by GlasCraft. This warranty shall not apply to any equipment where any parts or components were replaced by any parts or components not manufactured or supplied by GlasCraft. The decision by GlasCraft shall be conclusive and binding on Purchaser.

GlasCraft does not warrant that any equipment or parts sold to Purchaser meet or comply with any local, state, federal, or other jurisdiction's regulations or codes. GlasCraft does not warrant that any equipment or part sold to Purchaser, when used individually or in concert with any other part, equipment, device, component or process, does not infringe on any patent rights of any third party. GlasCraft only warrants that it has no specific knowledge of any such infringement.

GlasCraft makes no warranty as to any parts or equipment manufactured by others. Purchaser shall look solely and only to the manufacturer of such parts or equipment with respect to any warranty claims. GlasCraft hereby assigns to Purchaser the original manufacturer's warranties to all such equipment and parts, to the full extent permitted.

THE AFORESAID WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. SPECIFICALLY THERE ARE NO WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, WHICH WARRANTIES ARE SPECIFICALLY DISCLAIMED.

GlasCraft shall not be liable for any loss or expense resulting from damage or accidents caused by improper use or application of materials manufactured or sold by GlasCraft or its distributors or agents.

UNDER NO CIRCUMSTANCES SHALL GLASCRAFT'S LIABILITY EXCEED THE AMOUNT PURCHASER PAID FOR THE CLAIMED DEFECTIVE EQUIPMENT OR PART. UNDER NO CIRCUMSTANCES SHALL GLASCRAFT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OR FOR LOST PROFITS.

No action arising from or relating to any goods manufactured by or purchased from GlasCraft may be brought more than one (1) year after the cause of action accrues.

Technical Assistance.....

Thank You for selecting GlasCraft spray equipment

Should you have any questions or need technical assistance, contact your factory authorized GlasCraft distributor.

Distributor: _____

Phone: _____

Contact: _____



For any issues your distributor cannot address, the GlasCraft technical service department is always available to assist you with the operation of your spray equipment. To help our technical representatives expedite your call and better address your questions, please have the following information ready and available when you phone GlasCraft.

*** If your questions are not urgent, You can e-mail all correspondence to service@glascraft.com**

Model: _____

Serial number: _____

Type of spray gun: _____

Serial number: _____

Is your equipment:

Single phase: _____ Three phase _____

What is the inbound voltage to your equipment: _____

Temperature setting ISO: _____

Temperature setting POLY: _____

Temperature setting HOSE: _____

For Air Powered Systems:

Air compressor size: _____

CFM generated: _____

Pressure at the system:

Hydraulic _____ Pneumatic _____

Dynamic fluid pressure:

ISO _____ POLY _____

Spray gun chamber size: _____

Material being sprayed: _____

Viscosity: ISO _____ POLY _____

Approximate material temperature: _____

For Your Reference



Date Purchased _____
Distributor _____

Contact _____
Phone _____
E-mail _____

GlasCraft manufactures a complete line of polyurethane foam and polyurea coating spray systems. If your application is in-plant or a field contractor - GlasCraft has a system package to meet your requirements.

GUARDIAN - AIR POWERED / A5 & A6 SERIES EQUIPMENT

- . 6000 OR 12000 WATTS OF HEAT
- . 1600, 2200, OR 3000 PRESSURE SET-UPS AVAILABLE

MH, MH II, & MH III HYDRAULIC POWERED SYSTEMS

- . UP TO 45 LBS / MINUTE OUTPUT
- . EXCELLENT PERFORMANCE AND RELIABILITY

GUARDIAN MMH - MOBILE MODULAR HYDRAULIC SYSTEMS

- . SPECIFICALLY DESIGNED FOR ANY TYPE OF SPRAY RIG
- . GIVE COMPLETE UTILIZATION OF FLOOR SPACE IN MOBILE RIG

PROBLER P2 SPRAY GUN

- . IMPINGEMENT MIX / AIR PURGE
- . OPTIONAL NOZZLE FOR SPRAYING STUD WALLS, POURING & STREAM JET

For more information concerning any of these GlasCraft products,
contact your local authorized GlasCraft distributor or visit www.glascraft.com

A detailed technical line drawing of a GlasCraft dispensing system, showing various components like tanks, valves, and piping. The drawing is rendered in a light gray color, serving as a background for the text.

Quality and Performance...

GENUINE GLASCRAFT

Glas **Craft**

DISPENSING EXCELLENCE

ADS
ADVANCED DISPENSE
SYSTEMS

www.glascraft.com

GC-1389
REVISION B

5845 WEST 82nd STREET
INDIANAPOLIS, INDIANA 46278
U.S.A.

Phone (317) 875-5592
Fax (317) 875-5456
E-Mail sales@glascraft.com